

# LED Daytime Running Light for Can-Am Spyder F3



ZP-YJ-030602-017

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT


This LED DRL Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

**Note:** Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

2. Drill a hole at the upper middle of the front bumper by the pistol drill.

## INSTRUCTIONS

1. Open the cover, get the storage box out.

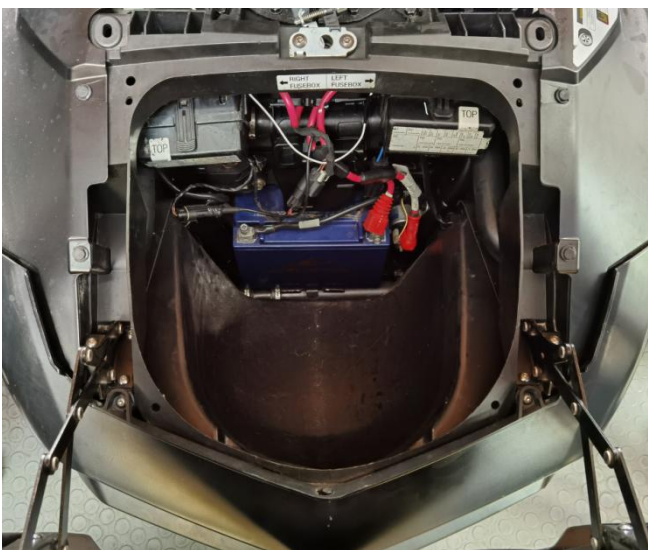

# LED Daytime Running Light for Can-Am Spyder F3




ZP-YJ-030602-017

3. Put the wire harness of the daytime running light through the drilled hole. Connect the negative pole of the light to the negative pole of the battery. Connect the positive pole to the fuse of ACC control box(as shown in the figure)



5. Put the storage box back, then the installation finished.

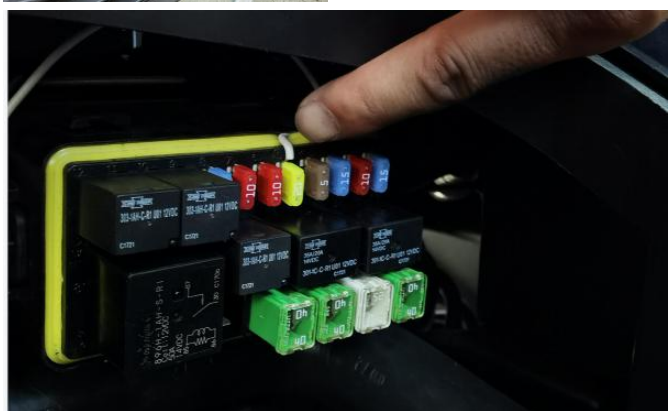

4. Put the both ends of the light against the mounting surface, and drill holes by the pistol drill, then fix the light on the front bumper by screws.

