

Can-Am Spyder Front Fender LED Light Kit

ZP-YJ-030602-018



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

Your FRONT FENDER LED LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Take out all the screws as the arrow shows, remove the wire harness of the fender lights, remove the front splash guard.



2. Remove the front fender flares from the splash guards.



3. Remove the side reflex reflector from the original fender flares, as indicated by the arrows.



4. Use the perforating template in the packing box, to drill holes at the right fender flares.


Remark : Just drill holes on the right side, no need to drill on the left side).



5. Pass through the wire harness of the light as the arrow shows.

Can-Am Spyder Front Fender LED Light Kit

ZP-YJ-030602-018

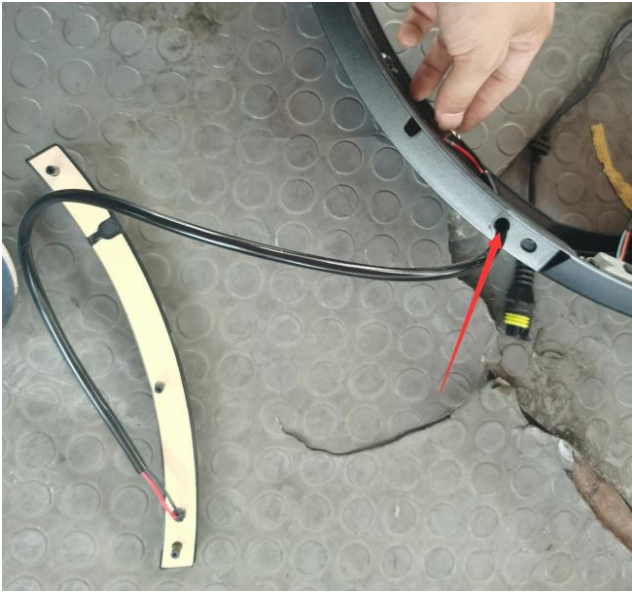

6. Remove the non-stick paper of the double sided adhesive, which is on the back of the light, and stick the light on the fender flares.




7. Attach one 6mm gasket (circled in red) on the middle pillar. Lock the fender light with clamping rings and self-tapping screws.



8. Install the fender flares on the splash guard. Sort the wire harness out. Insert the plugins according to the picture.



9. Open the cover plate as the arrow shows, connect the plugin of the patch cord to the plugin of the wiring harness on the rear view light. Sort out the patch cord.

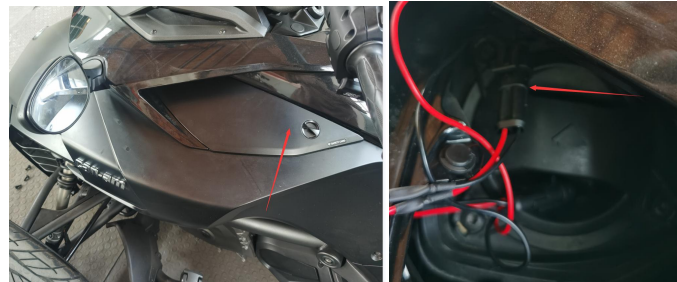

10. Install the splash guards, connect the plugin of fender light to the plugin of patch cord.

