

LED Front Fender LED DRL for Can-Am Ryker



ZP-YJ-030602-020

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

Your FRONT FENDER LED DRL is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTRUCTIONS

Installation

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Take out the four screws as the arrow show, remove the front fender flares.



2. Take out all the screws as the arrow shows, split the front fender flares.



3. Remove the side reflex reflector from the fender flares, and take out the screws as the arrow shows.

LED Front Fender LED DRL for Can-Am Ryker




ZP-YJ-030602-020



4. Disconnect the plug, take out the original front daytime running light with turn signal light.



5. Install the front fender daytime running light with turn signal light as the direction of the picture, place and push the light as the arrow shows, to ensure the proper installation.

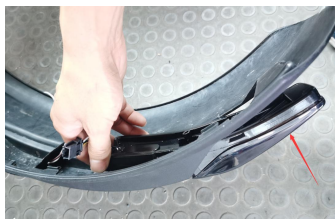

6. Go back to the Step 4, 3, 2. Assemble the fender flares, and install the fender flares to the vehicle. Finish the installation.

