

Auxiliary Lights for Can-Am Ryker

ZP-YJ-030602-026



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This Auxiliary Light Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.


1. Remove the cover of the vehicle.



2. Remove the front net of the vehicle.



3. Unscrew the lower part of the radiator, and install the brackets of left and right auxiliary light on the lower part of the water tank by using the long screws and bushing in the accessory package.


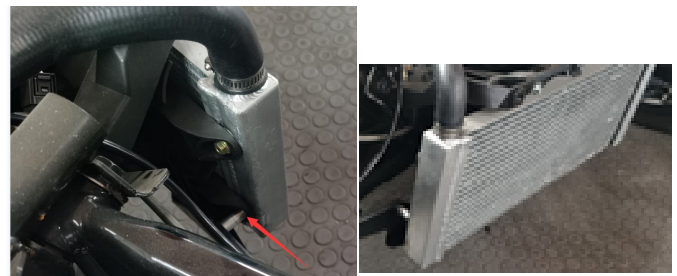


4. Align the lower round hole of the bracket with the U-shaped nut at the bottom of the original vehicle.

Note: Do not tighten the screws in this step, and tighten them with the screws of the original vehicle when install back the front middle net.

Auxiliary Lights for Can-Am Ryker

ZP-YJ-030602-026

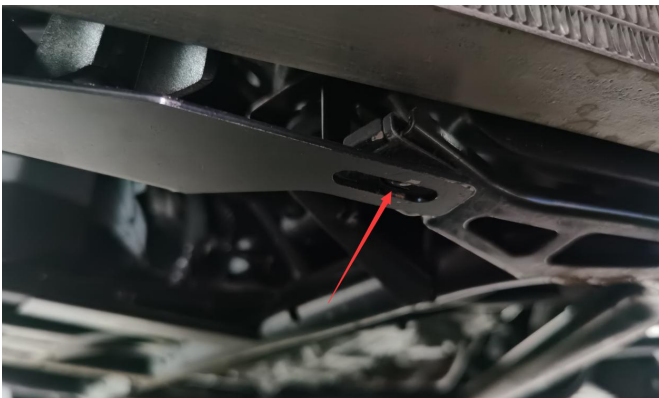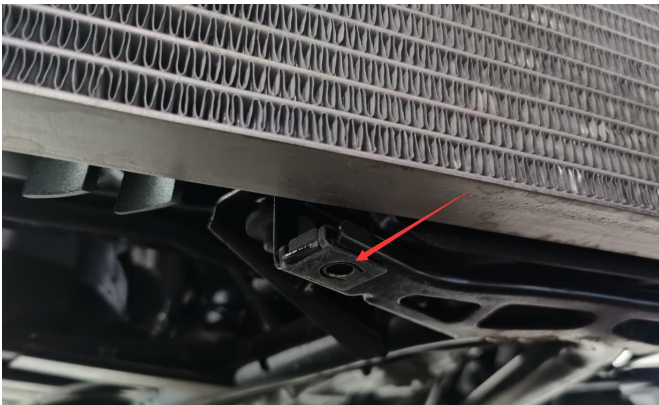

5. Install the auxiliary lights on the brackets.



6. Plug the transfer wire plugin of the auxiliary light with the headlight wire plugin.



7. Insert the connector of the auxiliary light into the connector of the transfer wire.



8. Install back the net and cover. Installation finished.

