

Turbo Hood Scoop with net for Can-Am X3

ZP-YJ-030603-125



BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This Turbo Hood Scoop is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product picture:

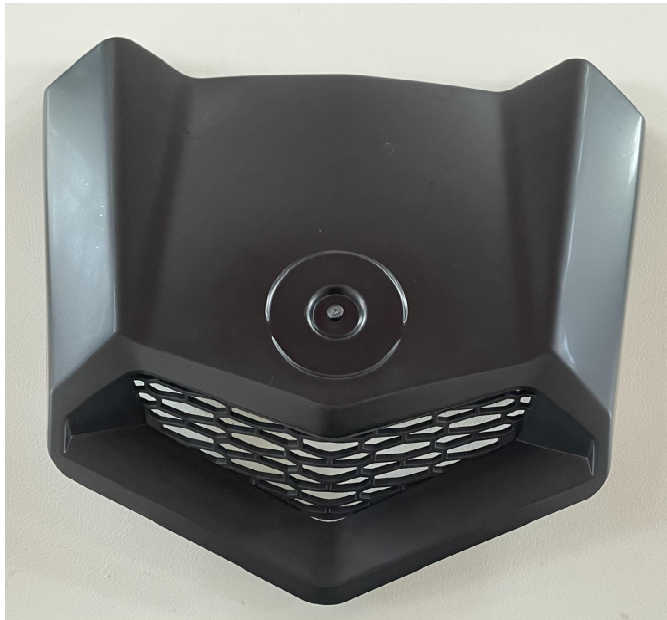

3. Remove the cover of the original vehicle and reinstall the cover with a net. As shown in figure:

Note: There are 5 ball studs on the back of the cover, which need to be pressed into the "O" rubber groove on the mounting bracket of the original cover.

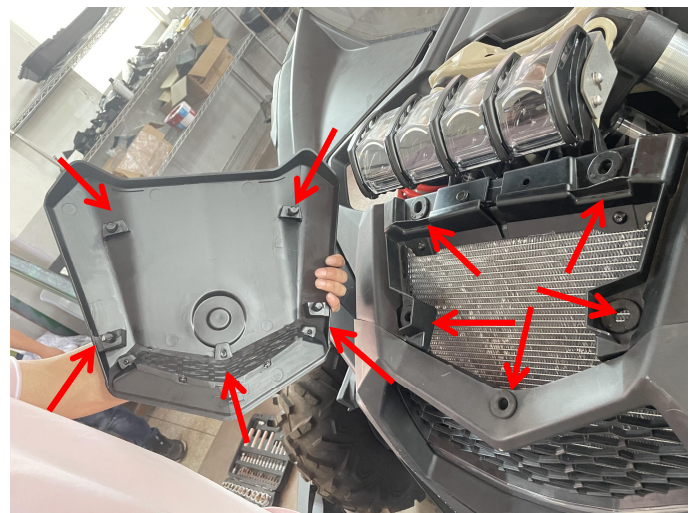

Turbo Hood Scoop with net for Can-Am X3

ZP-YJ-030603-125



4. Installation finished.

