

Front Center Fairing with Accent Light for Can

Am Ryker

ZP-YJ-030603-126



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT


This Front Center Fairing is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Pictures of products and accessories:




3. First remove the upper engine cover of the original vehicle, decoration boards on both sides and headlights of the original vehicle. As shown in figure:

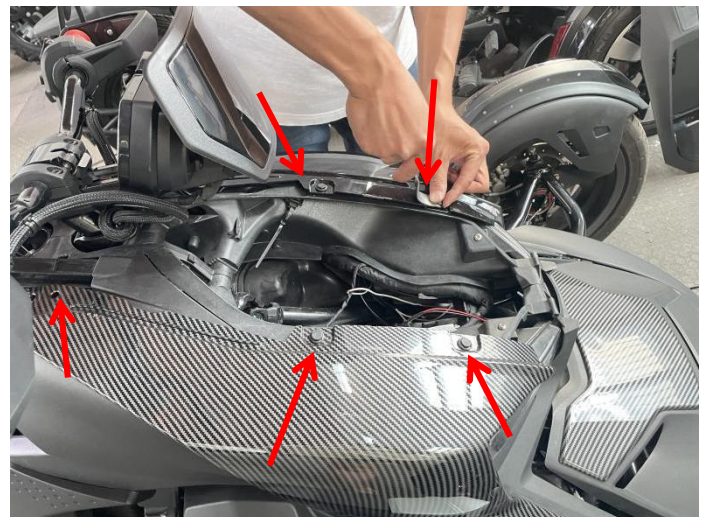


Front Center Fairing with Accent Light for Can Am Ryker

ZP-YJ-030603-126


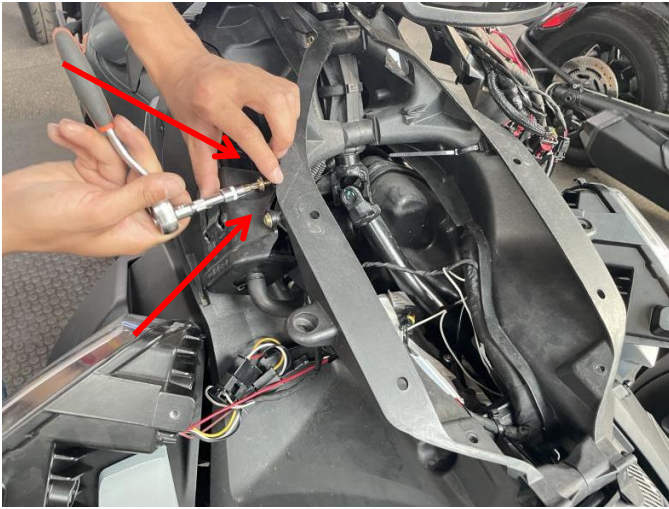


4. Remove the original vehicle fairing, install the fairing with accent light, and then connect one end of the product's adapter to the vehicle wiring harness plug-in and the other end to the fairing wiring harness. When finished, start the vehicle and check if the fairing light is on properly. Finally, the disassembled parts can be installed back to the original position. As shown in figure:

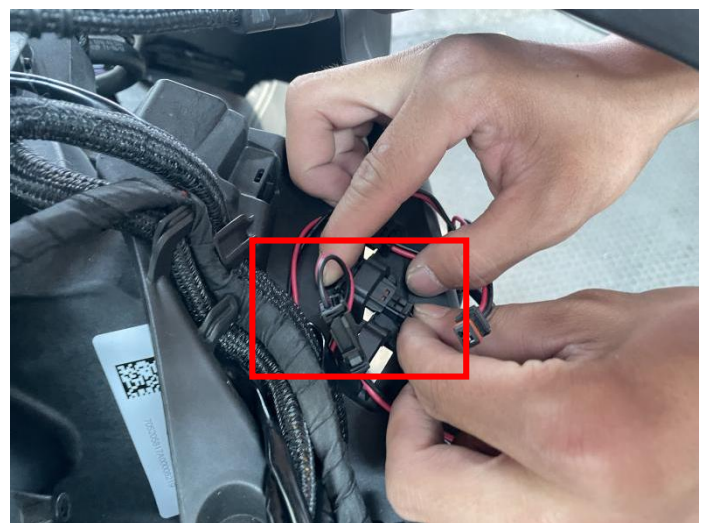

Front Center Fairing with Accent Light for Can Am Ryker

ZP-YJ-030603-126

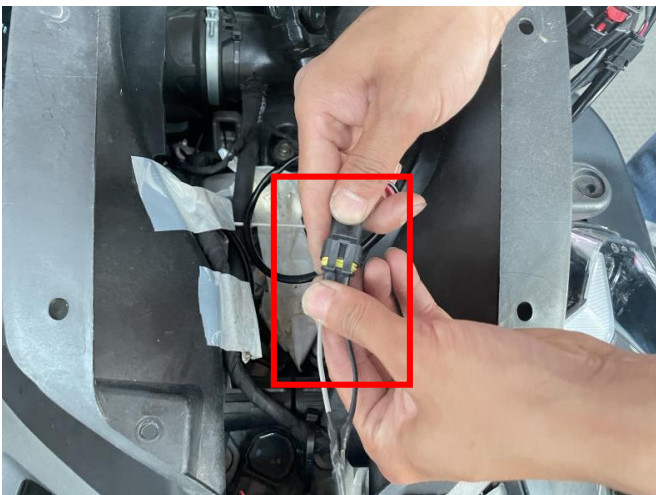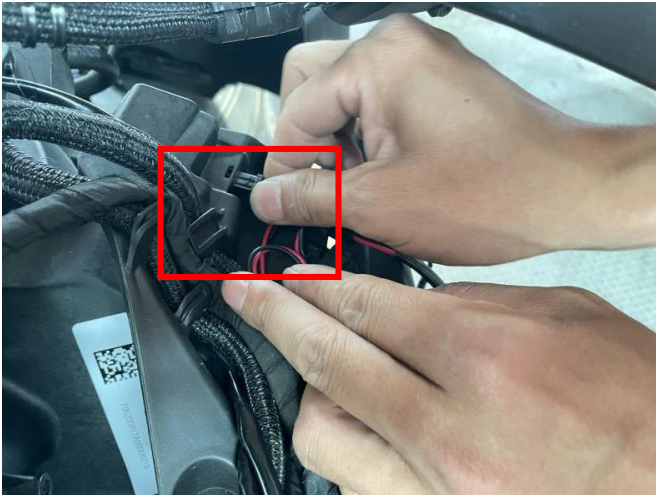

5. Installation Complete.