

Front Headlight Cover Trims for Can-Am

Maverick X3

ZP-YJ-030603-127



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This Headlight Cover Trim is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product picture:



3. Clamp the four mounting buckles on the back of the decorative parts into the holes on the edge of the headlight, as shown in the picture:

Note: It is necessary to distinguish the left and right sides before installation.

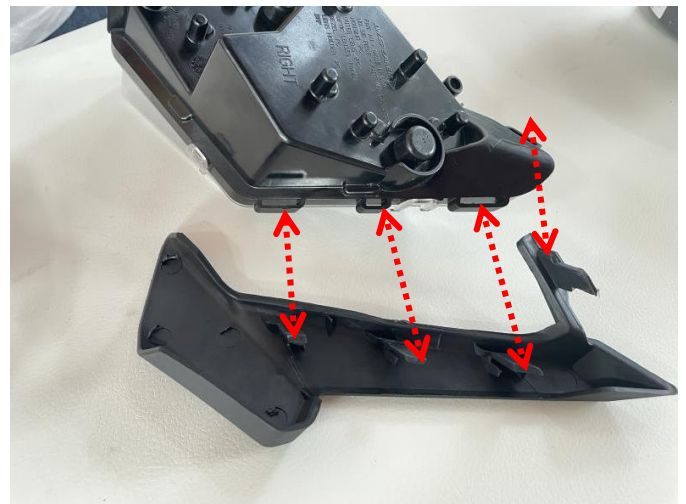

Front Headlight Cover Trims for Can-Am Maverick X3

ZP-YJ-030603-127



4. Installation finished.

