


- 1** Pull out the small hood with force. The back of the red circle position in the following picture is the buckle.



- 2** Remove the two screws pointed by the red arrows.

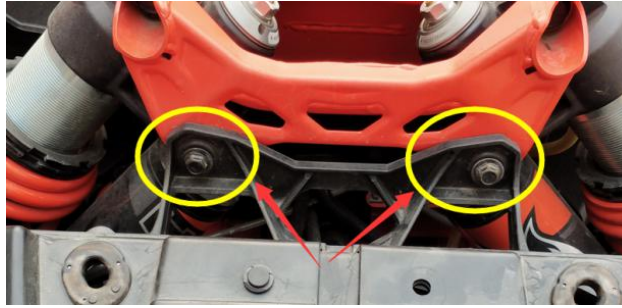

- 3** Place the shock tower LED light bar bracket on the water tank bracket and the frame bracket, and install the screws and tighten.



- 4** Install the small hood, and finish the installation process.

