

Rear Fender Deflector Kit For Can-Am Maverick X3

SAUTVS®

ZP-YJ-030603-160

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This REAR FENDER DEFLECTOR KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.



3. Assemble the products according to the same serial number. Place the square nut in the accessory package in the limit slot, fix it with screws, and then clamp the vehicle's own steel card on the fender flares.

NOTE: When placing the nut in the U-shaped groove, it is necessary to keep the nut level with the notch, and do not tilt it, otherwise the screw cannot be fixed later.

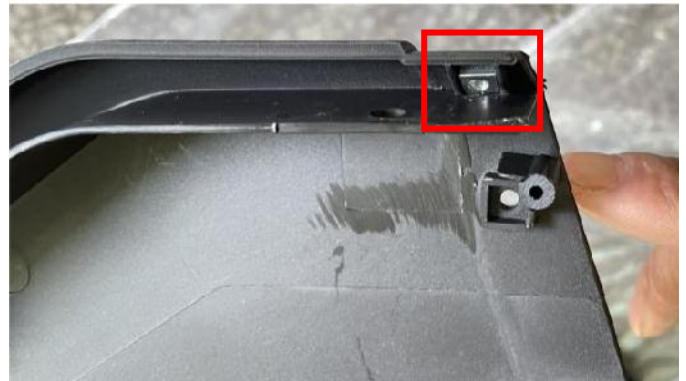

Rear Fender Deflector Kit For Can-Am Maverick X3

ZP-YJ-030603-160

SAUTVS®



4. Remove the nylon buckle of the rear wheel trim panel, and then use the vehicle's own screws and accessories to fix it (the other side can be installed in the same way).

5. Install the new fender deflector onto the trim panel, and then use the vehicle's own screws and accessories to fix it (the other side can be installed in the same way).



Finally, install the trim panel back to its original position.



Rear Fender Deflector Kit For Can-Am Maverick X3

ZP-YJ-030603-160

SAUTVS®

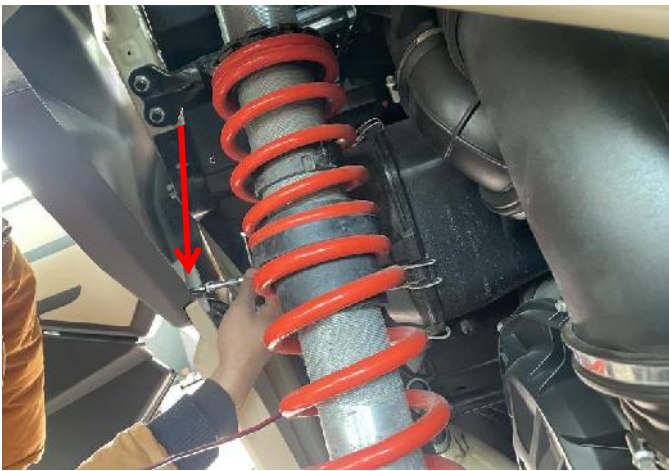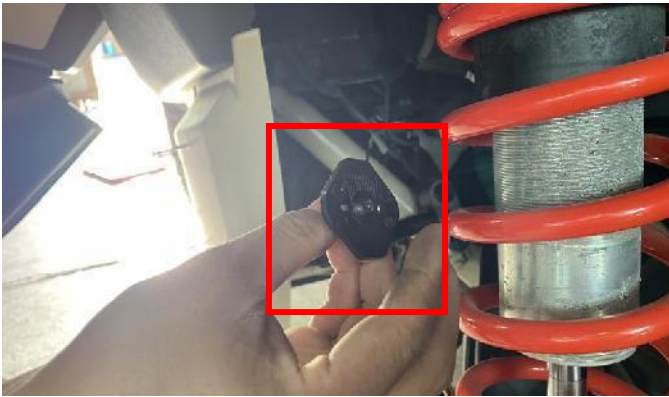

6. Installation completed.

