

Rear Cargo Tailgate for Can-Am Maverick X3

ZP-YJ-030603-161

SAUTV5

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This REAR CARGO TAILGATE KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble part 1 and part 2 with 8 hex socket screws of M6*16, 8 gaskets of M6 and 8 locknuts of M6.

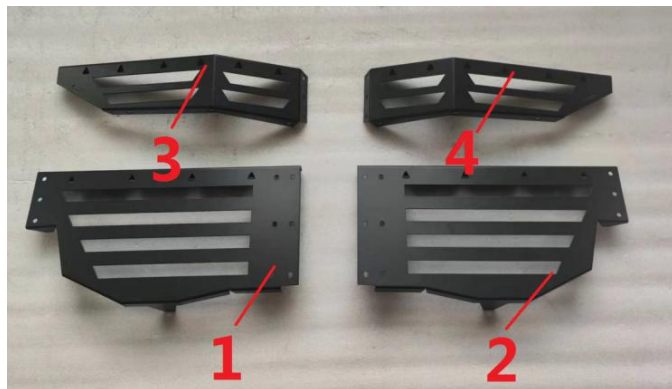

3. Assemble part 3 and part 4 on both sides with 6 M6 *16 hex socket screws, 6 M6 gaskets and 6 M6 locknuts.



4. As shown in the figure, remove the 6 screws on the original vehicle for standby.



5. As shown in the figure, remove the 2 screws on the original vehicle and the 2 nuts at the bottom for standby.



Rear Cargo Tailgate for Can-Am Maverick X3


ZP-YJ-030603-161

SAUTVS®

6. Install the rear fence on the carriage using the two removed M6*50 hex socket screws and nuts.



7. Fix the guardrail on the rear carriage with 6 hexagon screws of M6*30 removed, as shown in the figure, and tighten all the screws.

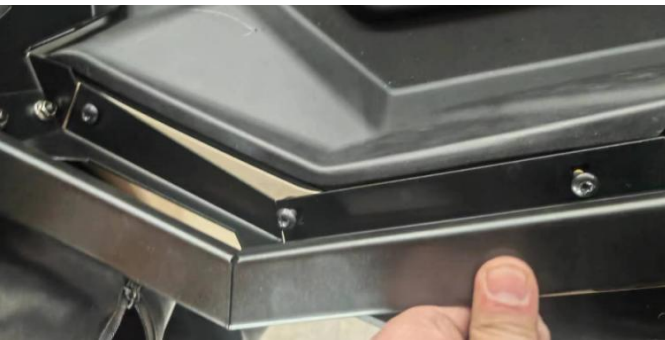

8. Use two straps to fix the guardrail on the rear post of the frame.



9. Installation is complete.

