

# Front Accent Lamp Ring for Can-Am Maverick x3

ZP-YJ-030602-037

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT

This FRONT ACCENT LAMP RING KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Pictures of products and accessories.



3. First disconnect the wiring harness plug-in of the original headlights and daytime running lights of the vehicle, and then remove the front fascia, cover plate and mesh grill as a whole.



4. Take out the positioning template from the product accessory package and place it at the installation position of the light. Mark it with a marker pen, and then use a 4mm drill bit to drill fixed holes on the marked points.





# Front Accent Lamp Ring for Can-Am Maverick x3

ZP-YJ-030602-037

SAUTVS



5. Place the mesh grill light, then pass through the fixing hole in Step 4 from the back, fix it with screws, and then use the "L" shaped small bracket in the product accessory package to fix the remaining 2 positioning columns. (The other side of the light can be completed in sequence according to the above steps.)

6. Install the installed mesh grill and front fascia back into the vehicle and fix them. Reconnect the harness of the headlight, then connect the harness from the original daytime running light to the matching adapter wire for this light, connect the other end to the vehicle harness, and finally connect the mesh grill light harness.






# Front Accent Lamp Ring for Can-Am Maverick x3

ZP-YJ-030602-037

SAUTVS®

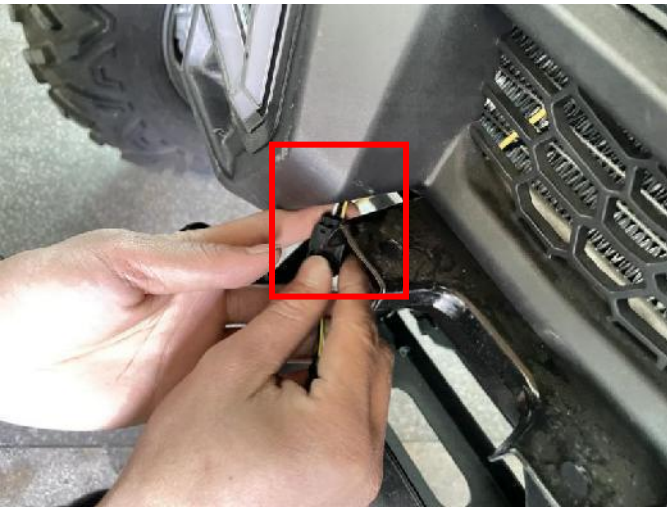

7. Installation is complete.

