

Brake Foot Rest For Can-Am Ryker

ZP-YJ-030603-162

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This BRAKE FOOT REST KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First remove the original pedal bracket from the vehicle.

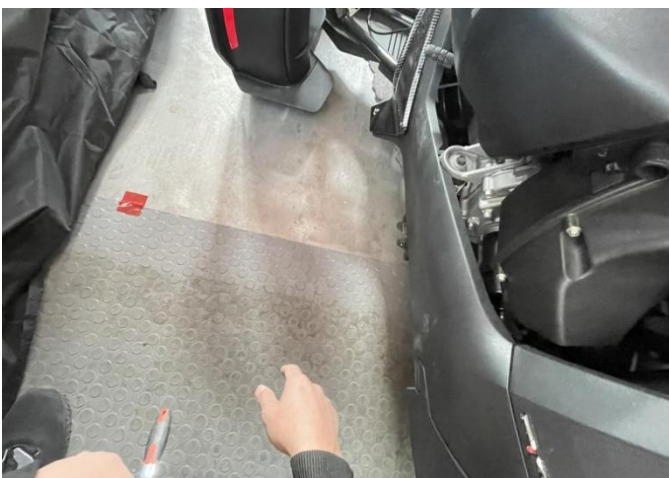

3. Install a new pedal bracket onto the vehicle, and then use the original screws of the vehicle to fix it.

(The other side can be replaced and installed in the same way)

Brake Foot Rest For Can-Am Ryker

ZP-YJ-030603-162

4. Installation is complete.

