

# Rear Cargo Bed Tailgate for Can-Am Maverick Trail/Sport



ZP-YJ-030603-164

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


## IMPORTANT

The Rear Cargo Bed Tailgate is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Assemble component 1, component 2, and component 3 with six M6 \* 16 hex socket screws, six M6 flat washers, and six jam nuts. As shown in picture:

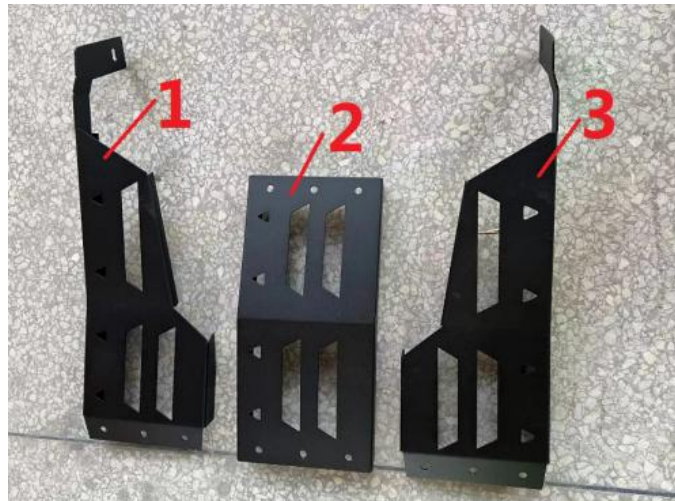

2. Remove the three screws from the original rear compartment, install the rear tailgate on the compartment using three M6 \* 40 hex

socket screws and three M6 gaskets, and tighten the screws. As shown in picture:



3. Installation finished.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.