

Air Intake Relocation For Can-Am Maverick X3

ZP-YJ-030603-163

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This AIR CLUTCH INTAKE RELOCATION KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Tools required for installation:
Phillips screwdriver
Pistol drill and 3MM drill bit



3. First, remove the original air intake mask of the vehicle, take out the built-in filter cotton and place it in the new air intake mask, and fix the filter cotton with the original plastic press plate.

Air Intake Relocation For Can-Am Maverick X3


ZP-YJ-030603-163



4. Install the new intake hood onto the original vehicle (the fixing clamp on the intake hood needs to be clamped to the front bumper tube).



5. Plug the air outlet at the rear seat on the driver's side of the vehicle with pearl cotton from the product accessories, then cover the cover, then use a 3MM drill bit to drill a fixing hole according to the position of the screw hole on the cover, and finally use the screws in the accessory package to fix it.

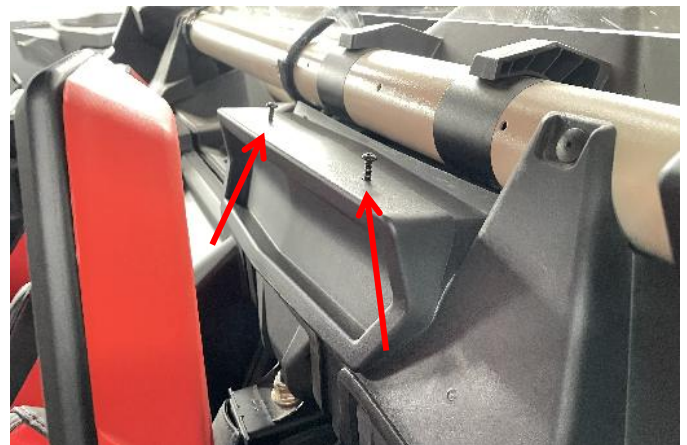

6. Installation is complete.

