

Black Front Fenders Kit For Can-Am Maverick X3

SAUTVS®

ZP-YJ-030603-159

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This FRONT FENDERS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product picture.



3. First assemble the separated products into a whole.

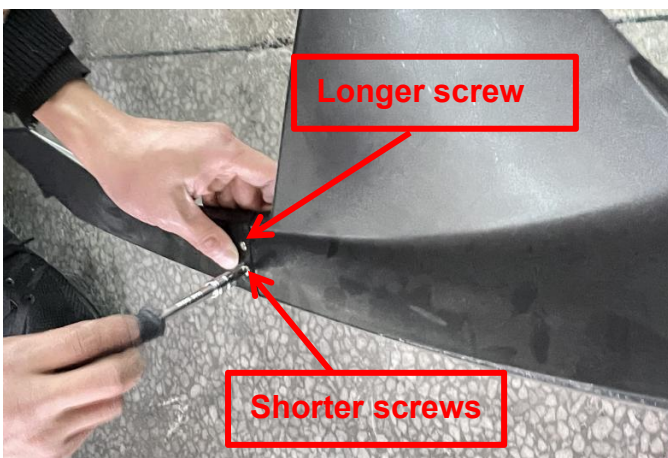

4. Remove the cover plate on the original front fascia and the cover trim panel from the vehicle



Black Front Fenders Kit For Can-Am Maverick X3

ZP-YJ-030603-159



5. Remove the middle net, headlight and daytime running lamp connected with the upper cover plate of the front fascia of the vehicle, then remove the upper cover trim panel of the vehicle, and finally install the new trim panel (The steel clip on the original vehicle trim panel needs to be moved to the new one).



6. After installation, clip the original vehicle's fixing clip back to its original position.



Black Front Fenders Kit For Can-Am Maverick X3

ZP-YJ-030603-159

7. Reinstall all assembled trim parts on the vehicle, and reinstall other parts removed before.



8. Installation completed.

