

Front Rack Kit for POLARIS Sportsman 570

ZP-YJ-030503-123

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Front Rack Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories:

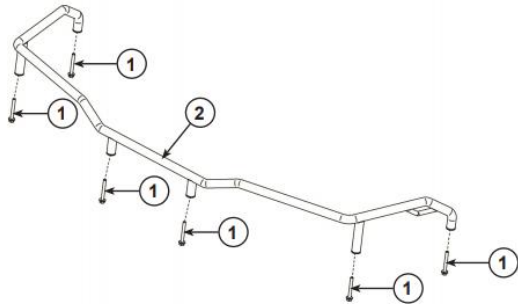

3. Open the front plastic rack. Remove and discard the four original machine screws and nuts holding the tubes to the rack. Figure 1.

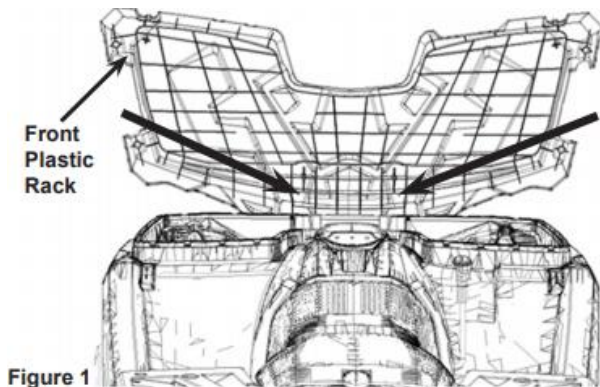


Figure 1

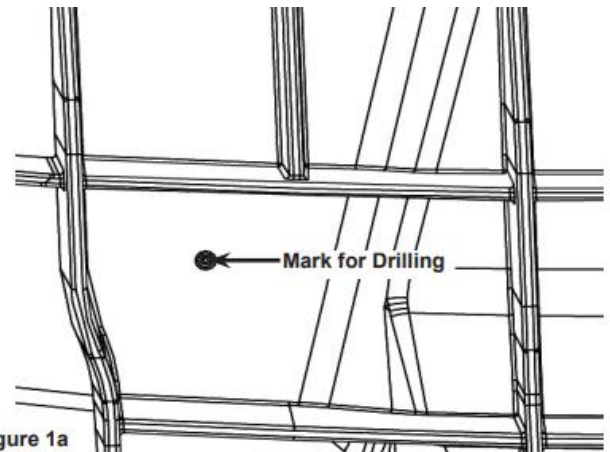


Figure 1a

4. Locate the marks inside the front plastic rack, and drill through the plastic using the drill bit. Figure 1.

5. Place the rack extender with the six M6 x 50 mm hex flange screws included in the kit (screw the first threads only). Figure 2.

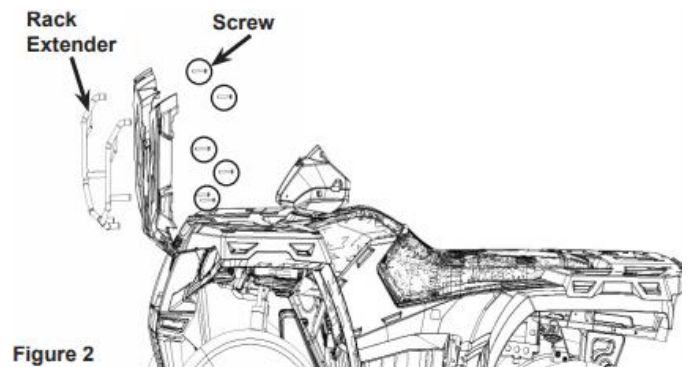


Figure 2

6. Tighten all screws.
7. Close the plastic rack.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.