

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Rear Bumper is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.



2. Assemble Part 1, Part 2 and part 3 by connecting casing 4 and connecting casing 5 with eight M8*55 hex socket screws and eight M8 locknuts. The direction of casing is shown below:







3. Install part 6 on the lower bracket of the rear of vehicle with two M8*10 screws and two M8 locknuts, as shown in the picture:




Rear Bumper with LED Light for Polaris Ranger 570 Midsize

ZP-YJ-030506-032





4. Fix the mounting bracket 6 at the bottom of the frame with four M6*25 flange self-tapping screws. Install the bar body on the iron support with four M8*65 hex socket screws and four M8 locknuts, and tighten all screws.

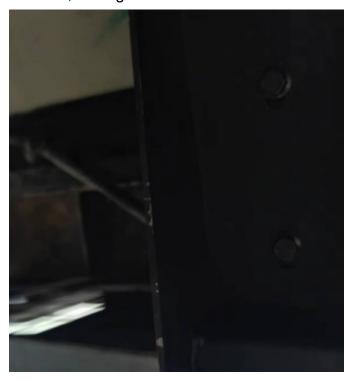





5. Installation finished.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.