

# Front and Rear Combination Fender Flares for Polaris RZR

PRO XP

ZP-YJ-030510-016

SAUTV5®

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

### IMPORTANT

This FRONT AND REAR FENDER FLARES KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

### Front Fender Flares

**Note:** Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product and accessories.



1. Assemble all the parts of fender flares into a whole first. As shown below:



# Front and Rear Combination Fender Flares for Polaris RZR

PRO XP

ZP-YJ-030510-016

SAUTV5®



2. Unscrew the screws on the diversion hood of the original front wheel, and then install the assembled fender flares on the diversion hood and fix them with the screws just unscrewed. As shown below:



3. Use an 8mm drill bit to drill holes according to the anchor points on fender flares, and then use nylon snap fasteners for reinforcement. (The other side of the fender flares can be installed as above steps). As shown below:



# Front and Rear Combination Fender Flares for Polaris RZR

PRO XP

ZP-YJ-030510-016

SAUTV5®



## Rear Fender Flares

Product and accessories.



4. Installation completed.



1. Assemble all the parts of the fender flares into a whole first, and two steel cards should be affixed to the fixed holes during assembly. As shown below:

# Front and Rear Combination Fender Flares for Polaris RZR

PRO XP

ZP-YJ-030510-016

SAUTVS®




2. Install the assembled fender flares on the rear-wheel deflector, use an 8mm drill bit to drill fixing holes according to the anchor points on the fender flares, and then use nylon snap fasteners to fix the holes. The fixing holes under the oil tank need to be fixed with steel clips by screws. As shown below:



# Front and Rear Combination Fender Flares for Polaris RZR PRO XP ZP-YJ-030510-016

SAUTV5®

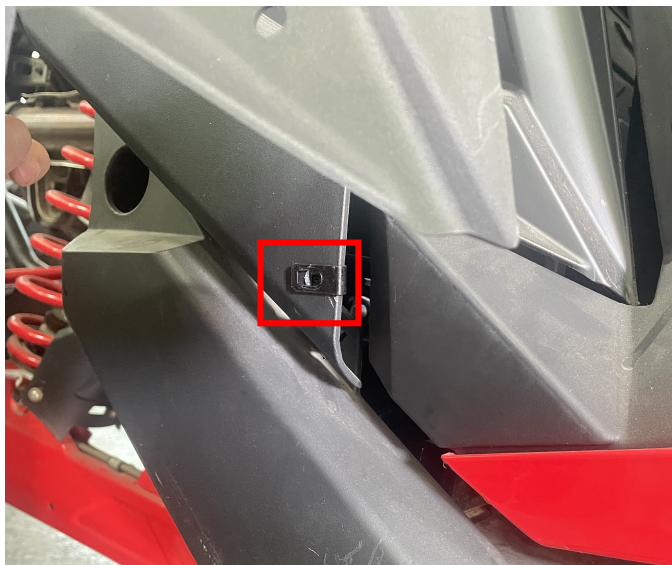

4. Installation completed.



3. At last, the tail of the fender flares needs to be fixed by matching self-tapping screws. (Install the fender flare on the other side as the above steps). As shown below:



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.