

Front Bumper Panel with Light for Polaris Sportsman 400 450 500 600 700 800 X2

ZP-YJ-030503-127

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This Front Bumper Panel with Light is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories:



3. First remove the front bumper panel of the vehicle. Then open the front storage box lid, and find the electrical box lid and open it, find the fuse marked 20A and pull it out. As shown below:

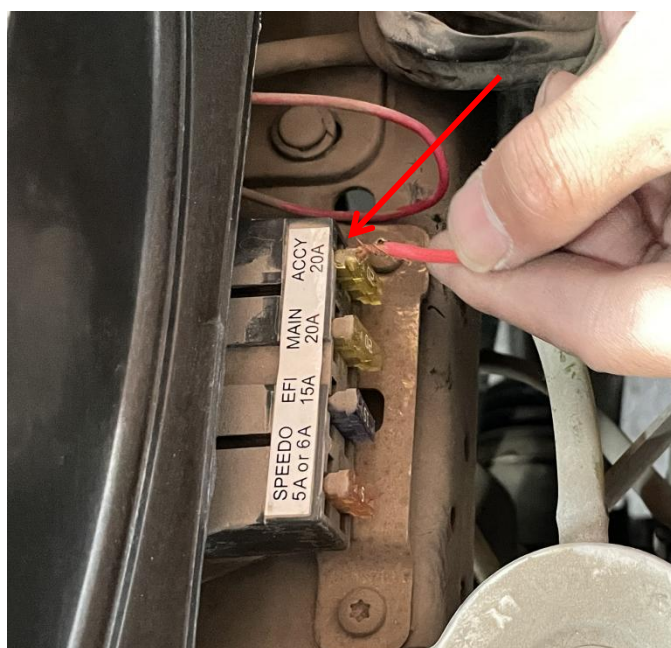



4. Prepare the conversion cables for the product. Peel off the top of the red and black wires. Stick the copper wire of the red one on the fuse, and then insert the fuse back to the original position. Wrap the copper wire of the

Front Bumper Panel with Light for Polaris Sportsman 400 450 500 600 700 800 X2

ZP-YJ-030503-127

SAUTV5

black one on the screw next to it. As shown below:

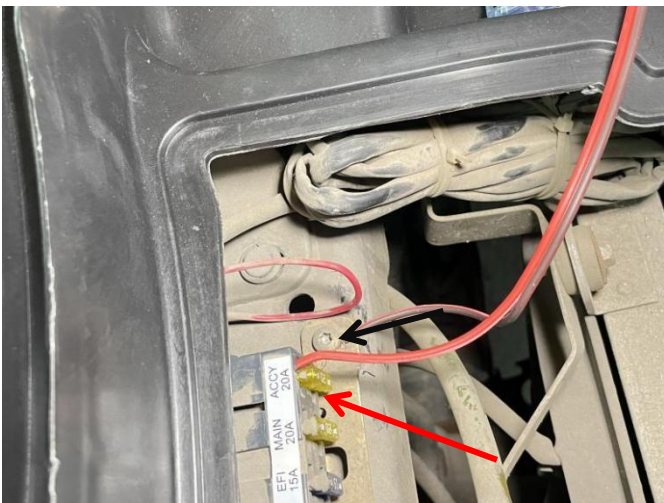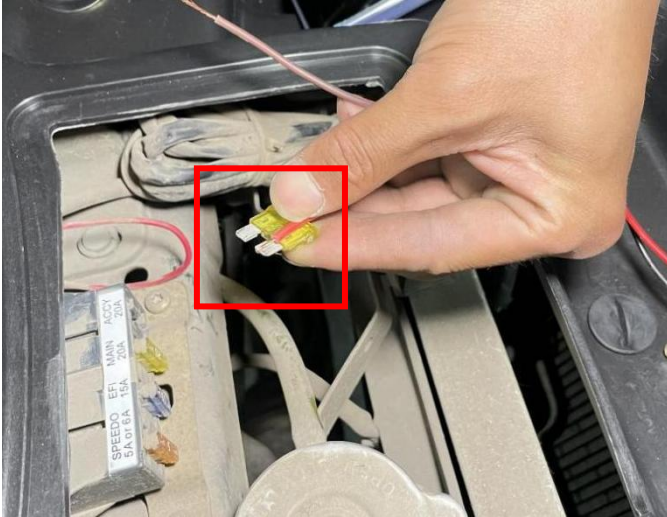

5. Connect the conversion cables of the power supply, then pull it along the gap of the vehicle to the front bumper panel, and connect it with the lamp wiring harness on the panel successively (connect the same color wiring harness), and then install the new panel on the vehicle, Finally cover the electrical box and storage box lid. As shown below:

(Note: When the panel is installed, push down after it is stuck.)

Front Bumper Panel with Light for Polaris Sportsman 400 450 500 600 700 800 X2

ZP-YJ-030503-127

SAUTV5



6. The installation is complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.