

# Front Service Cover Assembly for POLARIS Sportsman 500

ZP-YJ-030503-121

SAUTV5

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT

This Front Service Cover Assembly is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories:



3. First remove the front fascia of the vehicle (Remove the upper cover of the front fascia from the bottom right corner of the cover plate from inside to outside. Disconnect the wiring harness plug-in of the headlamp before removing the front fascia.), then open the upper cover of the storage box, and remove the storage cover after prying out the connecting pin on the hinge bracket with a tool. As shown below:




# Front Service Cover Assembly for POLARIS Sportsman 500

ZP-YJ-030503-121

SAUTVS®



4. Remove the two iron brackets from the original cover and install them on the new storage cover. As shown below:

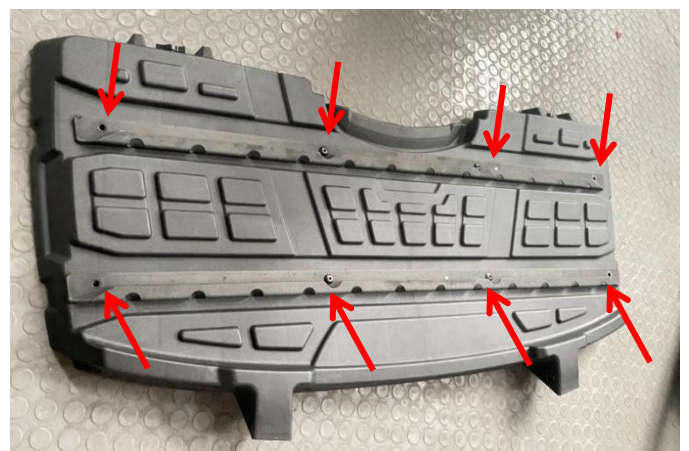

5. Install the storage cover with the iron bracket back on the vehicle. You can fix the upper cover with the original connecting pin of the vehicle, or with the screws of the product, and finally assemble the front fascia of the

# Front Service Cover Assembly for POLARIS Sportsman 500

ZP-YJ-030503-121

SAUTV5

vehicle. (When installing the cover plate on the front fascia, seize the top first and then press down firmly). As shown below:



6. The installation is complete!



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.