

# Mesh Grille LED Light for Can-Am Defender

SAUTVS®

ZP-YJ-030602-039

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT

The mesh grille LED light is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

### 1. Product picture



### 2. First remove the original car grille. As shown below:




### 3. Install the grille light onto the grille and secure it with an "L" shaped bracket from the back. As shown below:



# Mesh Grille LED Light for Can-Am Defender

ZP-YJ-030602-039

SAUTVS®

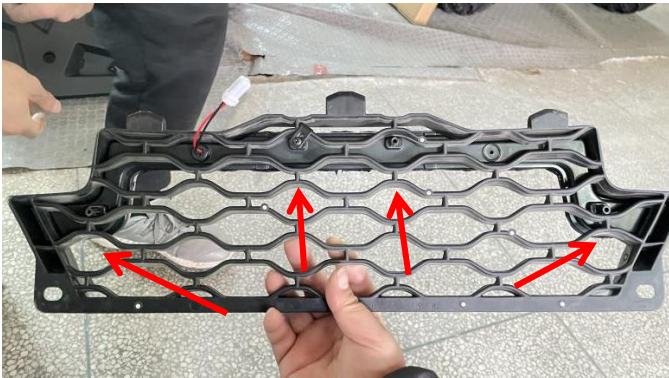

4. Open the original car hood, remove the A-pillar trim panel on the passenger side, locate the original car electrical box, and connect the red extension cable on the product adapter cable to the electrical box. As shown below:

5. Use a tool to unscrew the nut on the negative pole of the original car power supply, twist the copper wire at the top of the other black extension wire on the adapter wire into a circle, place it on the negative pole screw, and then screw back the nut. As shown below:



# Mesh Grille LED Light for Can-Am Defender

ZP-YJ-030602-039

SAUTV5



6. Pull the adapter cable connected to the power supply along the gap of the car to the front grille, connect it to the installed grille light, and finally install the grille and other decorative parts back to the original car. As shown below:

7. Installation finished.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.