

Front and Rear Fender Flares for Polaris General 1000

ZP-YJ-030510-017

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

These Fender Flares are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.



Front Fender Flares

1. Assemble the separate parts into a whole with screws first. As shown below:




2. Place the assembled fender flares on the stock fender flares of original vehicle, drill the screw holes according to the positioning holes on the fender flares with a 6mm drill bit, and then fix them with screws and nuts. No need to drill holes in the specified two places, and fix them directly with self-tapping screws. (Drill the fixing hole in the middle first, and fix it with screw first, which can effectively prevent the fender flares from moving when drilling other holes). The other side of the fender flares can be installed in the same way as above. Figure as below:

Front and Rear Fender Flares for Polaris General 1000

ZP-YJ-030510-017



original vehicle with a pry lever. Then install the widened fender flares on the original fender flares, and fix it with the snap fasteners just pried out. As shown below:

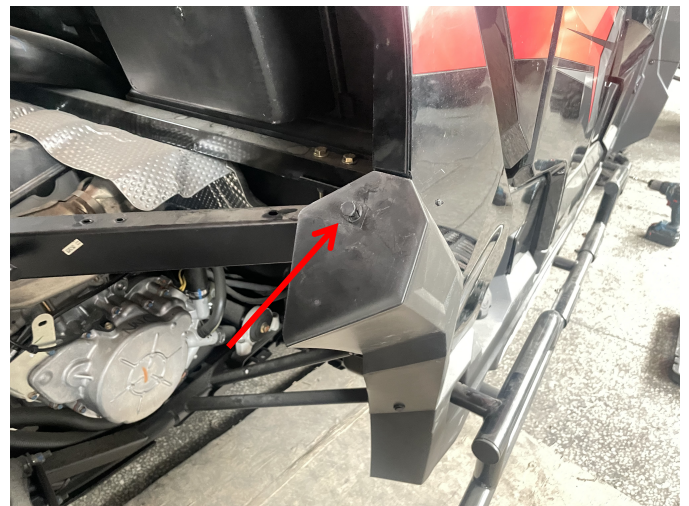

Rear Fender Flares

1. Lift the rear cargo box of the original vehicle first, and then pry out the snap fasteners on the front part of the stock rear fender flares of the

2. Follow step 2 of front fender flares, use a 6mm drill bit to drill the remaining positioning

Front and Rear Fender Flares for Polaris General 1000

ZP-YJ-030510-017

holes on the fender flares, and then use screws and nuts to fix the holes. As shown below:



4. Place the assembled fender flares on the stock fender flares of original vehicle, drill the fixing holes according to the positioning holes on the fender flares with a 6mm drill bit, and then fix them with snap fasteners. (Drill the fixing hole in the middle first, and fix it with snap fastener first, which can effectively prevent the fender flares from moving when drilling other holes). The other side of the fender flares can be installed in the same way as above. Figure as below:


Note: No need to drill hole at the head end.

3. Assemble the rear fender flares of the separate parts into a whole with screws. As shown below:




Front and Rear Fender Flares for Polaris General 1000

ZP-YJ-030510-017

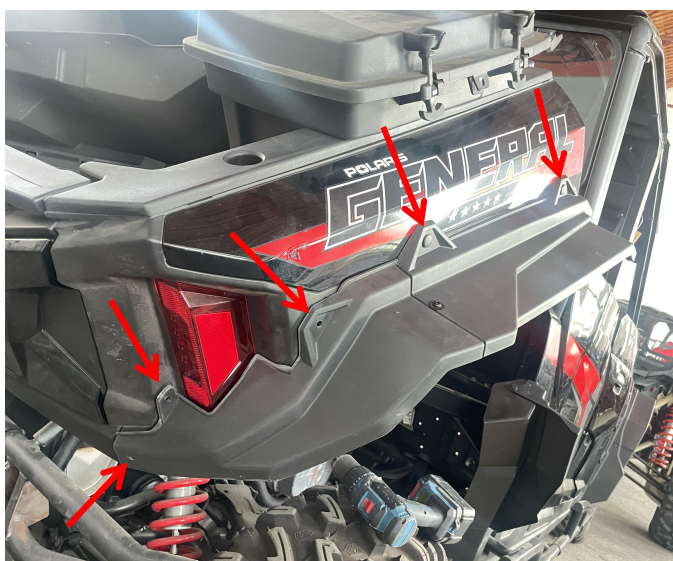

5. Finally, fix the hole at the head of the fender flare with self-tapping screw (the other side of the fender flares can be installed in the same way as steps 1-5 above). As shown below:

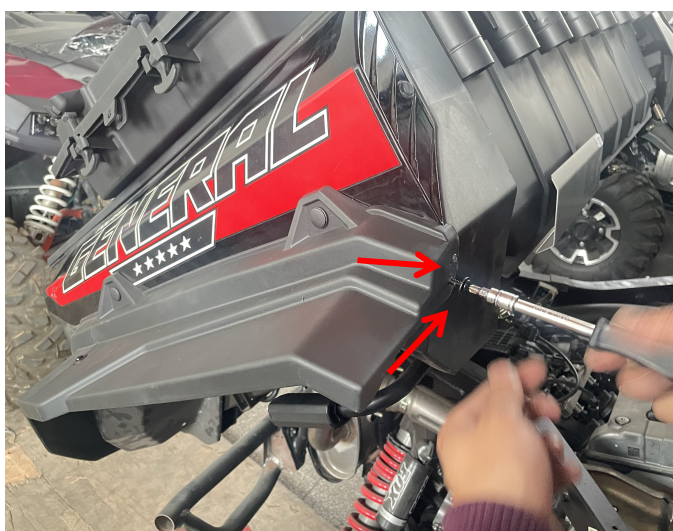

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

6. Installation finished.