

# Front Grille Light For Can-Am Maverick Trail

SAUTVS®

ZP-YJ-030602-038

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.



## IMPORTANT

This FRONT GRILLE LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.  
2. Open the vehicle hood, peel off one end of an extension cable and expose the copper wire. Then, select any screw from the original vehicle steel frame, wrap the copper wire around the screw, and conduct grounding and over voltage protection.

3. Prepare another extension cable, insert the extension cable through the reserved hole at the cover into the cockpit, and then pull the extension cable through the lower part of the instrument panel along the gap to the ACC electrical box under the steering wheel (it can be crossed through the gap at the connection between the steering wheel and the operating lever).


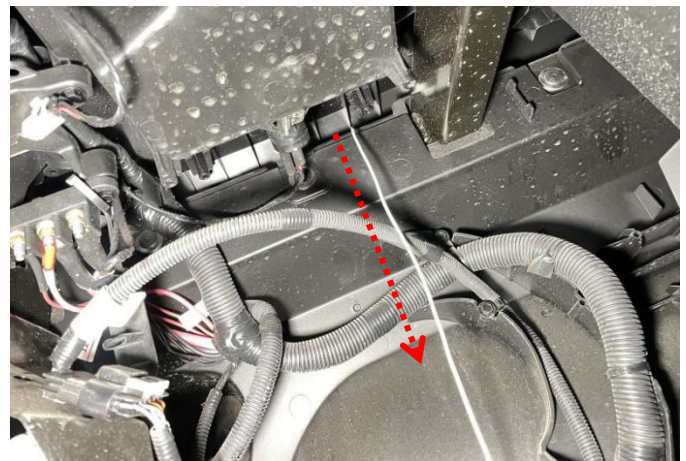
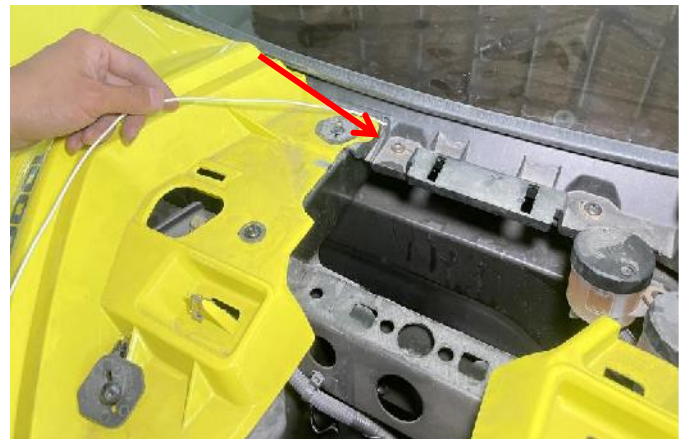


# Front Grille Light For Can-Am Maverick Trail

## ZP-YJ-030602-038

4. Open the box, find the fuse marked 10A and pull it out. Then peel the top of the extension harness, secure the copper wire to the fuse, and plug it back in place to cover the box.

5. Pull the two extension wires that have been connected to the power supply to the front grille light of the vehicle, pass through the holes in the grille of the vehicle, and connect them to the matching adapter wire of the product. Provide insulation protection (connect the extension wire of the electrical box to the red wire, and connect the extension wire of the grounding wire to the black wire), and then connect the adapter wire to the corresponding color harness on the daytime running light.

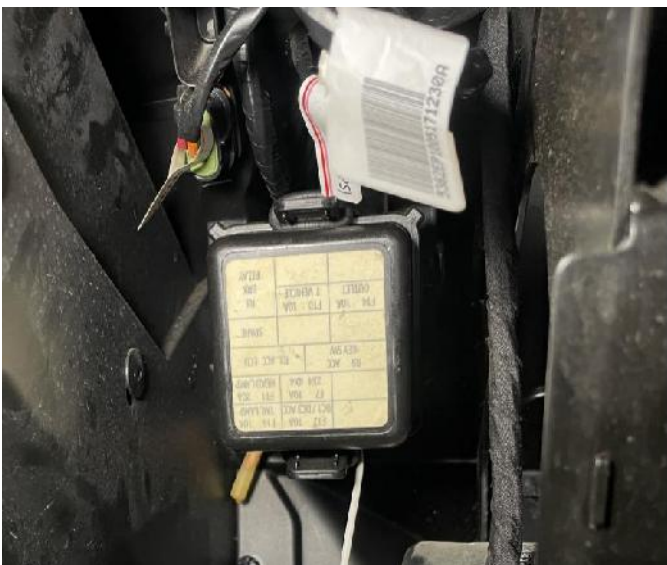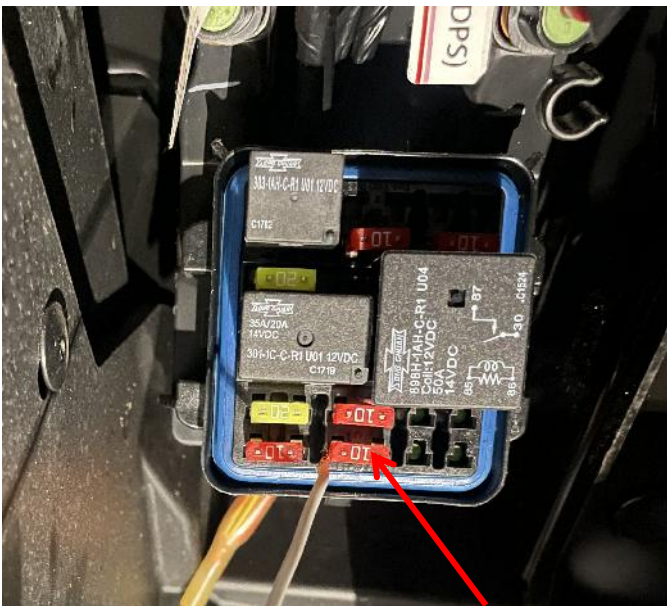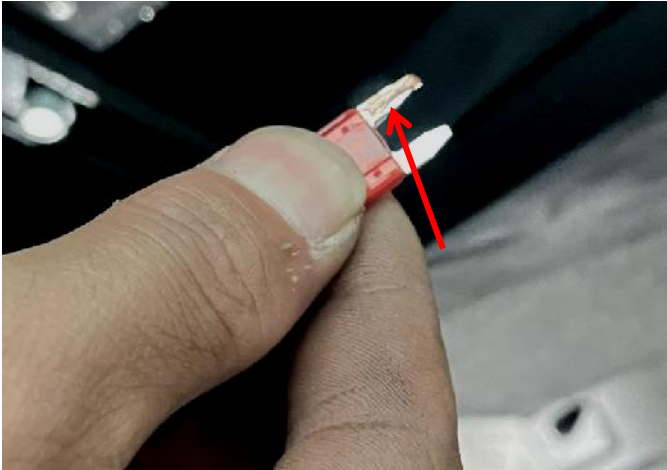

# Front Grille Light For Can-Am Maverick Trail

ZP-YJ-030602-038

6. First, wipe the installation position of the daytime running light clean, hide the excess wiring harness behind the grille, remove the anti adhesive film on the back of the daytime running light, stick the daytime running light to the original grille, and press hard to make it better fit. After installation is completed, reinstall the machine cover in its original position.



7. Installation is complete.

