

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT

This REAR ACCENT LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

**Note:** Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Products and accessories.



Tools used during installation:



1. Utility knife
2. Phillips screwdriver
3. Insulation tape
4. Pry lever
5. Socket wrench

## INSTALLATION

1. Use a pry lever to pry out the shell of the instrument platform storage box of the original vehicle and take out the storage box. As shown below:





2. Prepare the No. 1 conversion wire and extension wire in the product accessories, peel off one end of the conversion wire and extension wire respectively, and connect the two wiring harnesses (black wire to black wire, red wire to white wire), and then do insulation protection. As shown below:

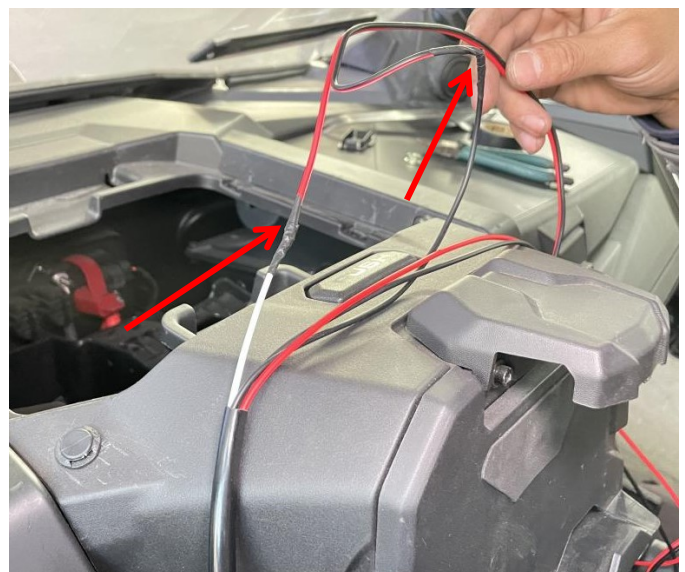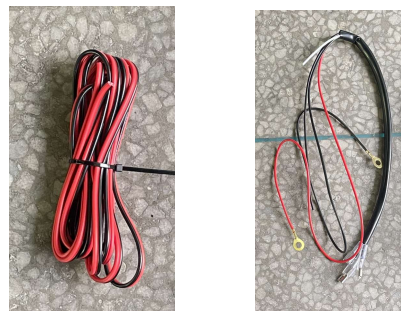

# Rear Accent Light for Polaris RZR PRO R



3. Use a pry lever to pry off any switch cover on the control panel of the original vehicle, and then thread the conversion wire in step 2 (the end with the copper sheath) out of the switch hole, and thread the other end of the extension wire from the gap in the dashboard to the passenger cab. As shown in the picture:

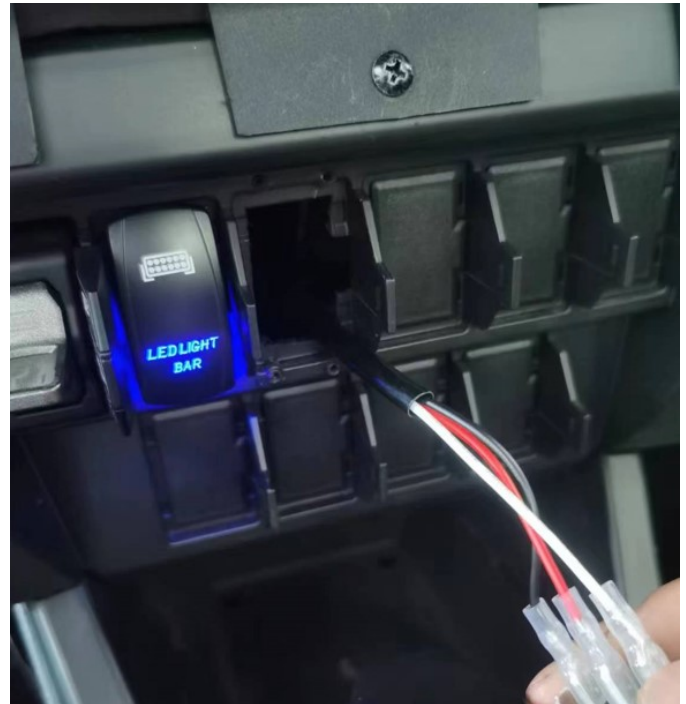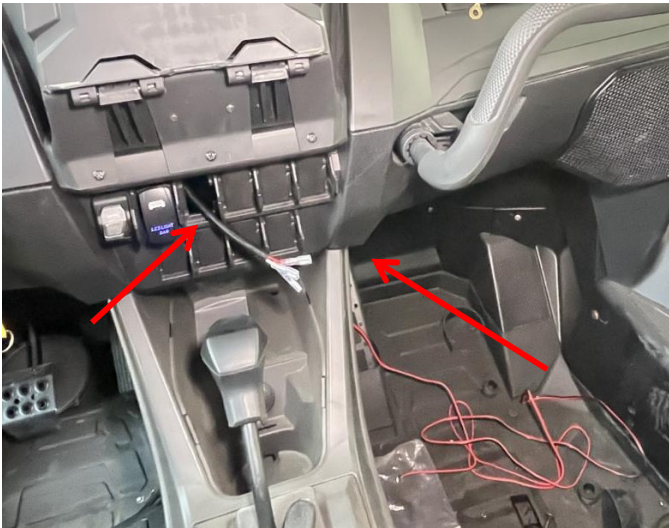

4. Take out the switch in the product, connect it with the wiring harness at the switch hole (as shown in the picture), and then install the switch on the switch hole. As shown below:

**Note:** If the switch is found to interfere with the panel during installation, you can use a utility knife to trim the edge of the panel.





# Rear Accent Light for Polaris RZR PRO R



5. After the switch is installed, find the terminals under the dashboard, unscrew the nuts of the positive and negative terminals, and then put the wire harness with the copper on the power supply bolts of the same color, and then screw back the nuts. As shown in the picture below:






6. Remove the front passenger seat of the original vehicle, open the cover of the central armrest box, take out the inner partition, put the extension cord in the front passenger into the armrest box along the gap of the interior edge, and then take the extension cord out of the vehicle from the armrest box. As shown below:

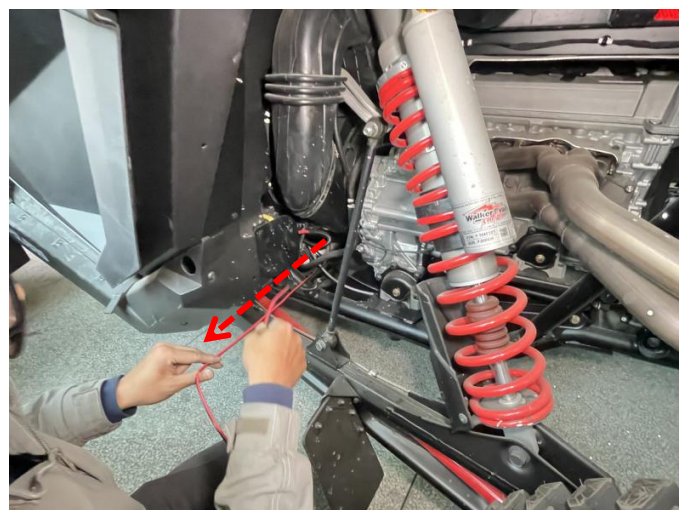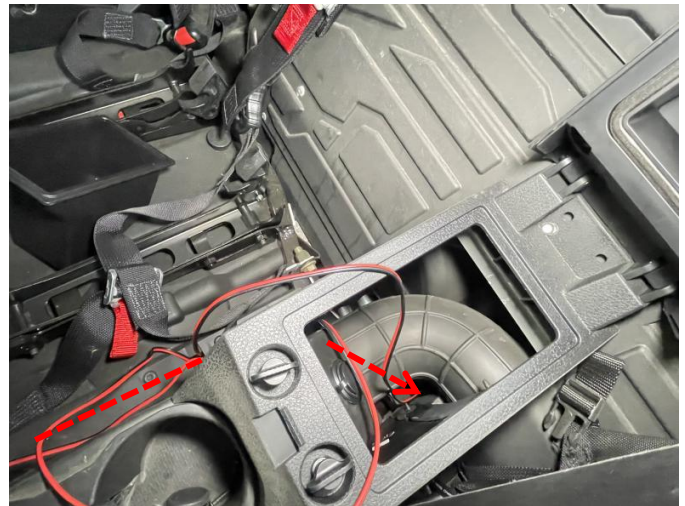

7. Install the rear accent light on the original vehicle, and fix it with self-tapping screws. Then prepare the No. 2 conversion wire in the accessories, connect one end to the wiring harness plug-in on the rear accent light, then disconnect the wiring harness plug-in of the original taillight on one side and reconnect it with the plug-in of the conversion wire. Finally, peel off the outer skin of the extension cord and connect it with the remaining wiring harness on the conversion wire (black wire to black wire, red wire to red wire), and do the insulation

# Rear Accent Light for Polaris RZR PRO R

protection. The exposed wiring harness can be fixed and hidden with cable ties, and finally installed back the removed parts previously. As shown below:

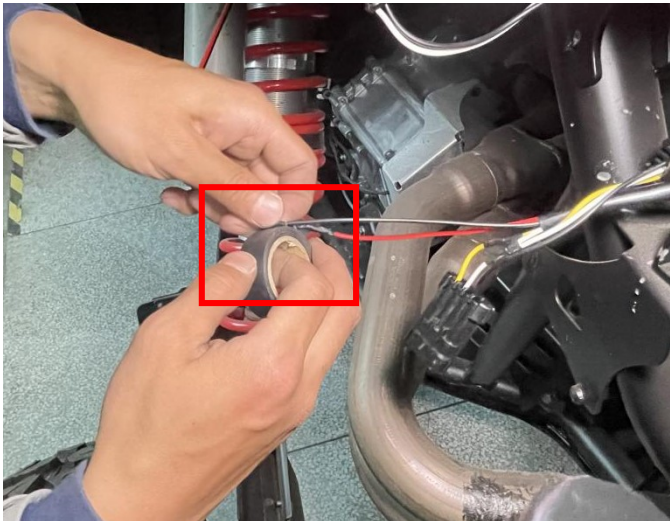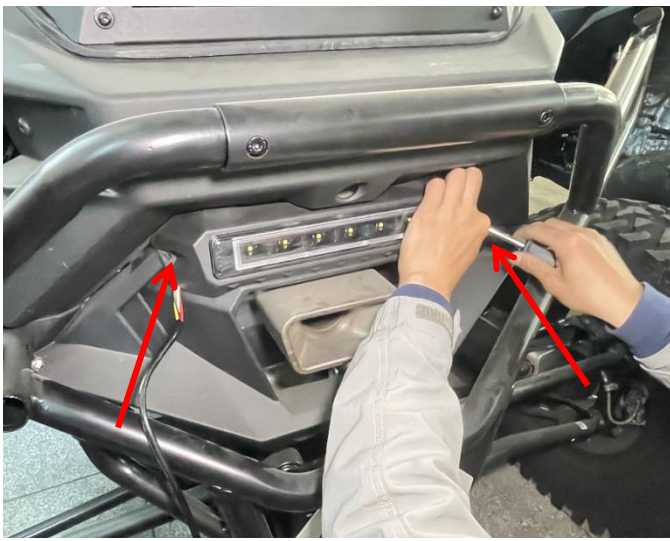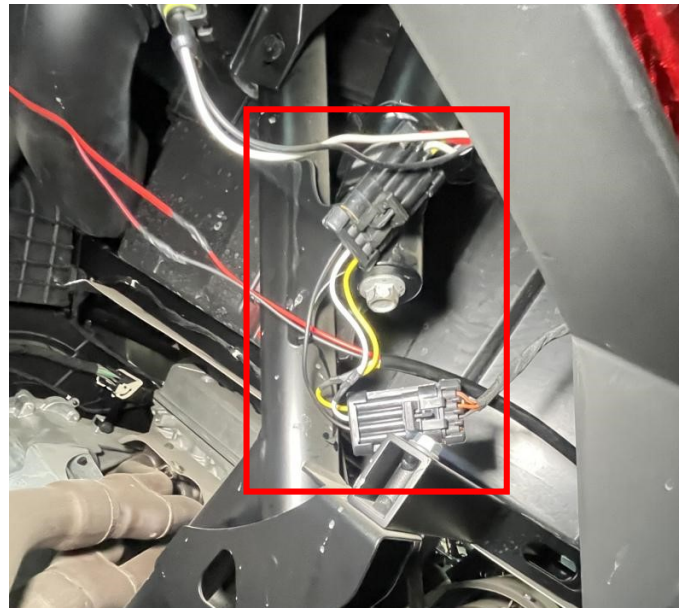

# Rear Accent Light for Polaris RZR PRO R

8. Installation completed.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.