

7" Front Rack Extender For Polaris Sportsman 850 1000

ZP-YJ-030508-018

SAUTV^{VS}



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This 7" Front Rack Extender is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

KIT CONTENTS

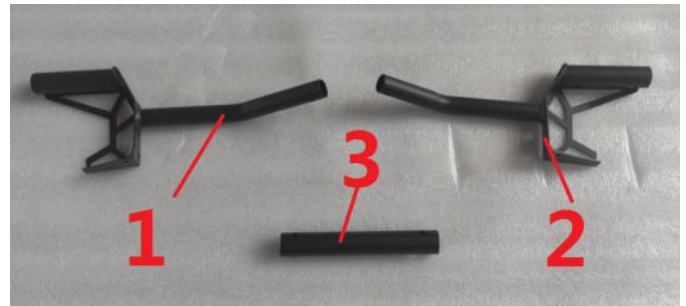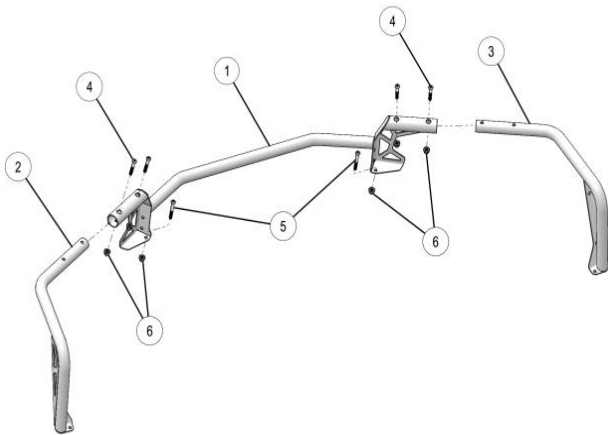

TOOLS REQUIRED

- Safety Glasses
- Metric Socket Set
- Metric Wrench Set
- Allen Wrenches
- Torx Drivers
- Electric Drill and 1/4" or 6mm Drill Bit

ASSEMBLY

1. Assemble parts 1, 2 and 3 with 2pcs M6*35 hex screws and 2pcs M6 locknuts, and ensure that the screws are passed through the large hole of the casing. As shown in the figure:



2. Insert LH rack extender ② into center rack extender ①. Align the fastener mounting holes of both extenders and install the screws ④ and nuts ⑥. Do not tighten fasteners.

7" Front Rack Extender For Polaris Sportsman 850



1000

ZP-YJ-030508-018


SAUTVS®

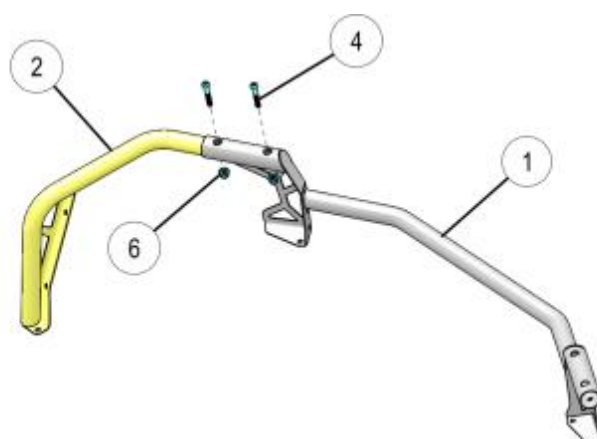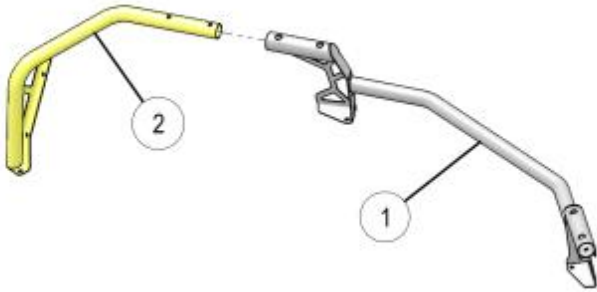


3. Repeat (Step 2) for RH rack extender ③ installation.

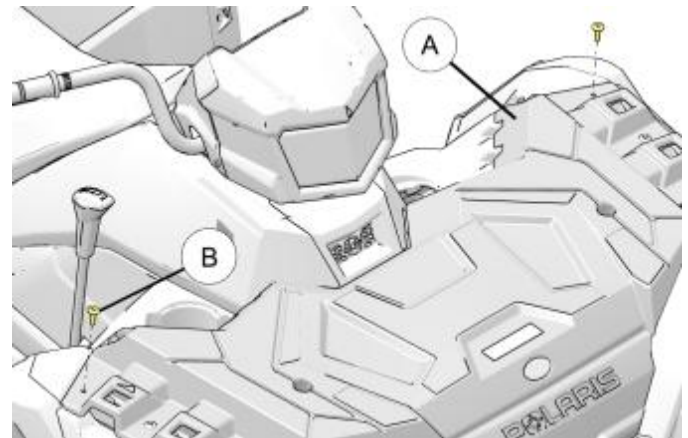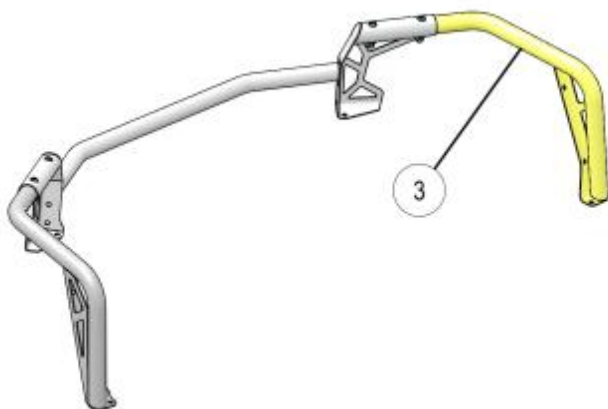

3. Detach the rubber latch (C) on both sides to open the front rack (A).

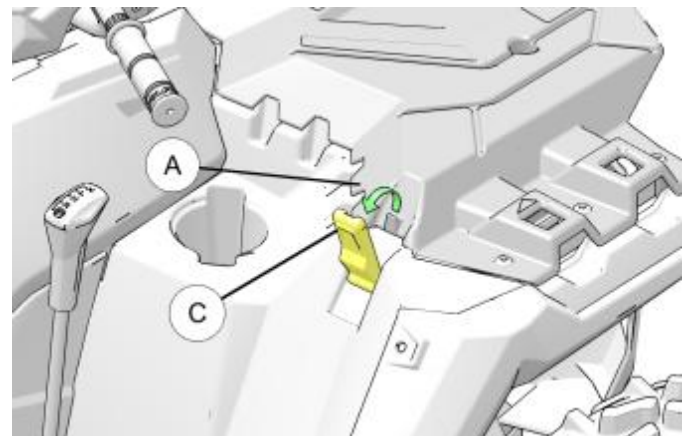

4. Open the front rack (A) as shown.

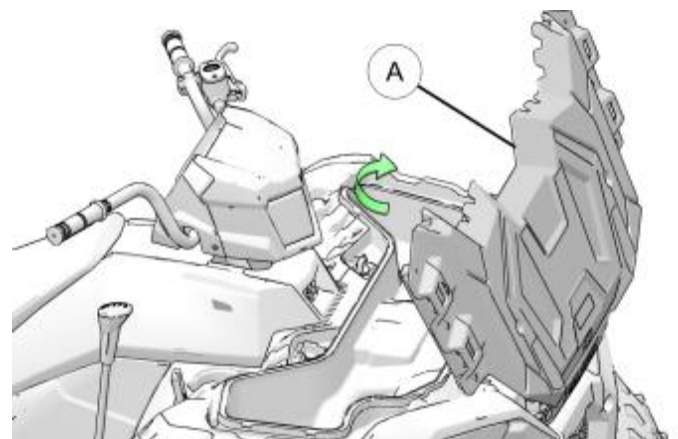

5. Remove two screws (D) from front base tube (E). Discard both the screws.

INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove two screws (B) from the front rack (A). Retain screws (B) for reuse.

7" Front Rack Extender For Polaris Sportsman 850


1000

ZP-YJ-030508-018



SAUTV5

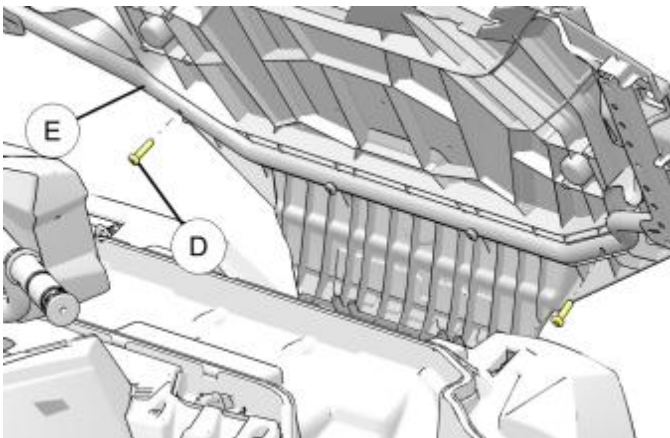


6. Using existing holes as a guide, drill through rack in locations (F) using drill bit. Ensure that the holes pass through the front rack (A).

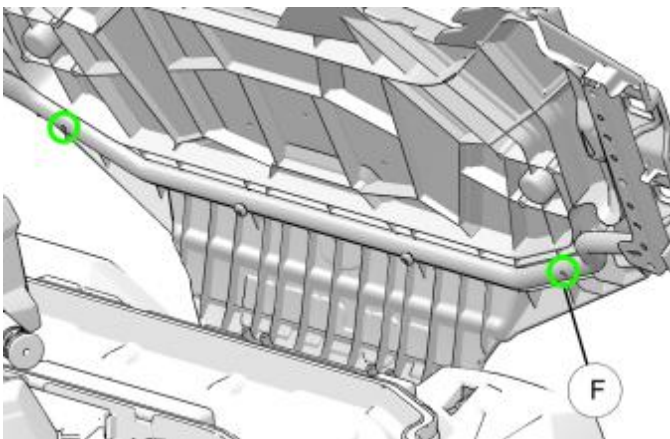


7. Place front rack extender assembly on front rack and install two screws ⑤ and nuts ⑥. Do not tighten fasteners.

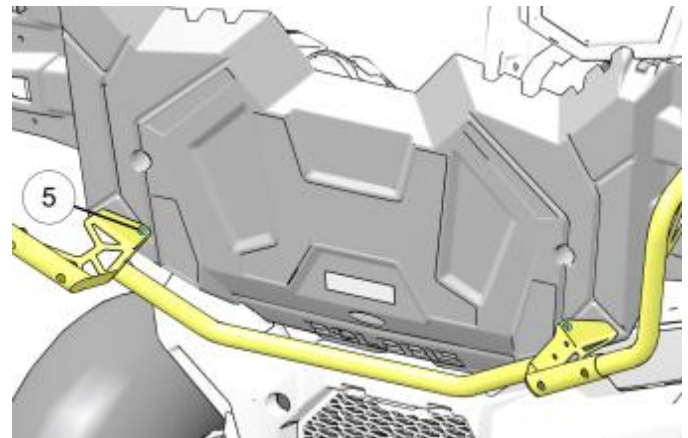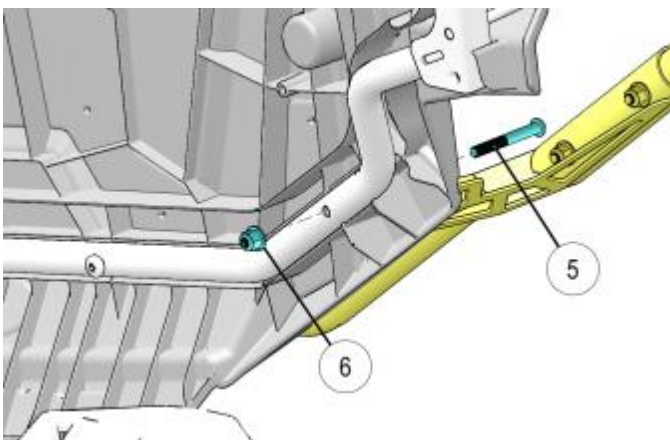

8. Close the front rack (A) along with rack extender assembly.

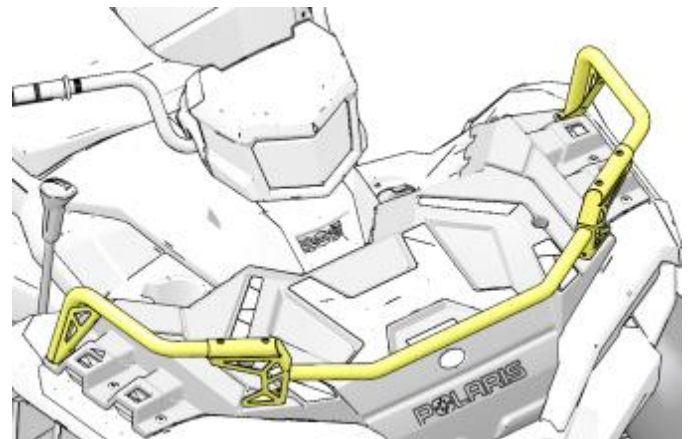

9. Reinstall two screws (B) removed in (Step 4) on front rack (A) through the rack extender assembly as shown.

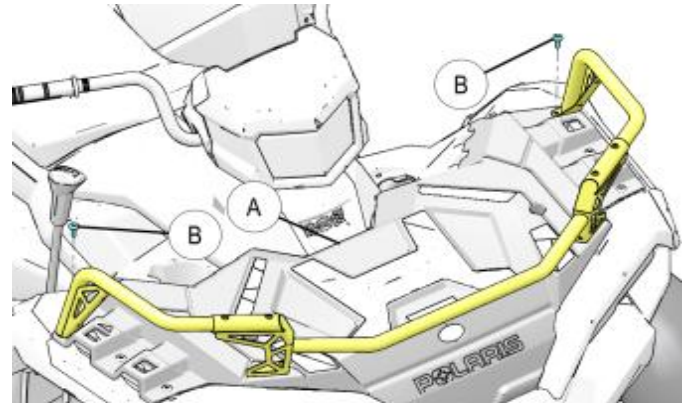

10. Tighten all fasteners. Secure front rack using rubber latches (C). The installation is complete.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.