

Rear Center Accent Tail Light For Honda Talon 1000

ZP-YJ-030902-007

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Rear Center Accent Tail Light is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product and accessories.

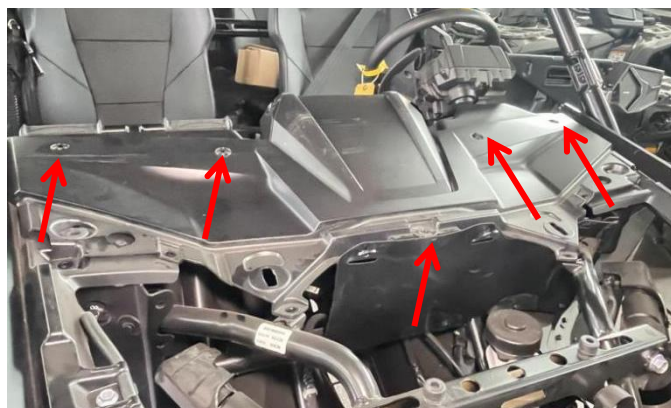


3. Remove the cover of the vehicle and the decorative panels on both sides. As shown in the figure:



Rear Center Accent Tail Light For Honda Talon 1000

ZP-YJ-030902-007

4. Go to the cab, pry off one of the switch cover on the instrument table at will, then prepare the adapter wire #1 and extension wire in the product accessories. Connect the extension wire with the wiring harness of the conversion wires after broken skin (black wire connects black, red wire connects white), and do insulation protection. Then through the adapter wire from the front cover to the switch cover. As shown below:

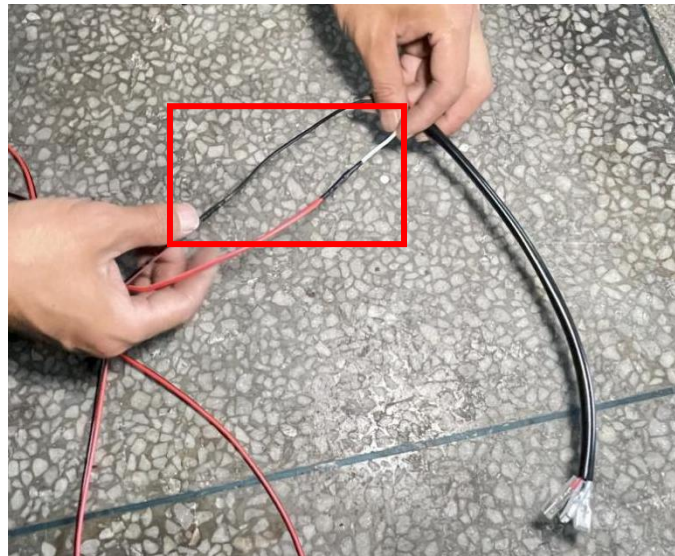


5. The wiring harness through the cab will be inserted on the wiring sheet of the control switch in the order, as shown in the picture. Then the control switch will be placed on the switch panel. (If the switch hole is small, use a utility knife to make the hole larger). As shown below:



Rear Center Accent Tail Light For Honda Talon 1000

ZP-YJ-030902-007

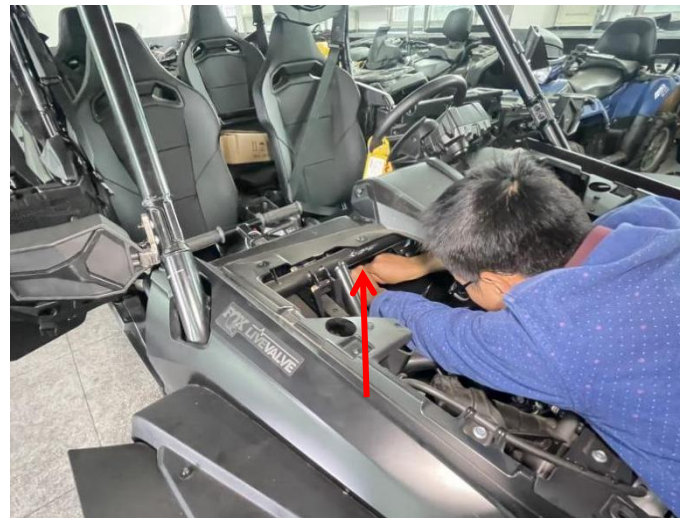

6. The newly connected extension cable is also threaded into the co-pilot through the gap at the front cover, and then pulled along the gap to the outlet hole at the rear seat, and to the rear taillight from the outlet hole. As shown below:




7. Install the rear center accent tail light on the rear fascia of the vehicle and use the matching screws to fix it. Then use a pry wrench to pry out the taillight on one side of the vehicle (when using a pry wrench, it needs to push against the rear shell of the taillight rather than the light cover, otherwise the light will be cracked), and


Rear Center Accent Tail Light For Honda Talon 1000

ZP-YJ-030902-007

disconnect the wiring harness plug-in of the taillight. As shown below:

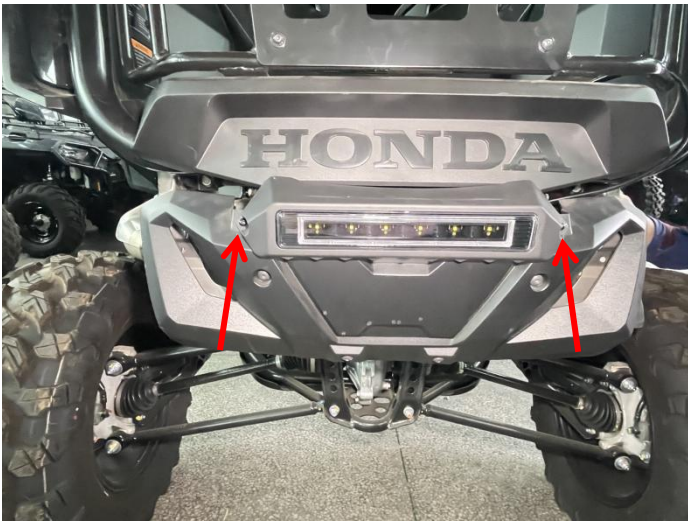

After that, connect one end of the conversion wire to the wiring harness plug-in on the rear accent tail light, and connect the other end to the taillight and the vehicle wiring harness plug-in, and then reinstall the taillight. As shown below:

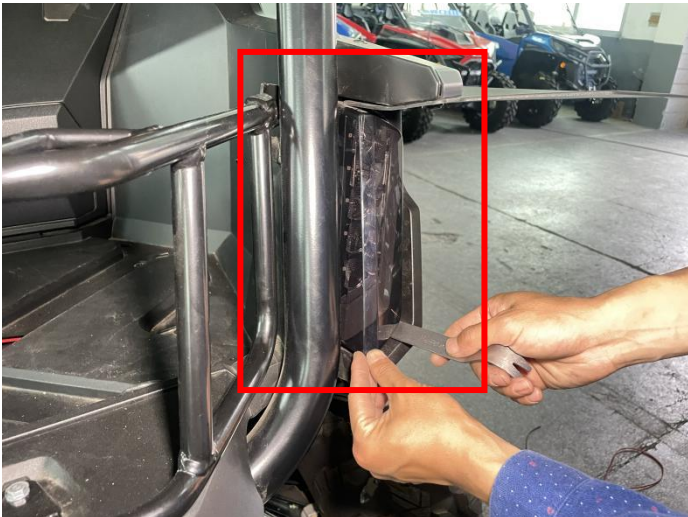


9. Find the wiring harness plug-in reserved by the vehicle at the front cover, disconnect the plug-in at the female end, and then connect the corresponding plug-in on the conversion wire #1 to it. Finally, reinstall the decorative plate and front cover. As shown below:


8. Prepare the other adapter wire #2 in the product accessories, connect the extension wire after breaking the skin (connect with the same color), and make insulation protection.

Rear Center Accent Tail Light For Honda Talon 1000

ZP-YJ-030902-007

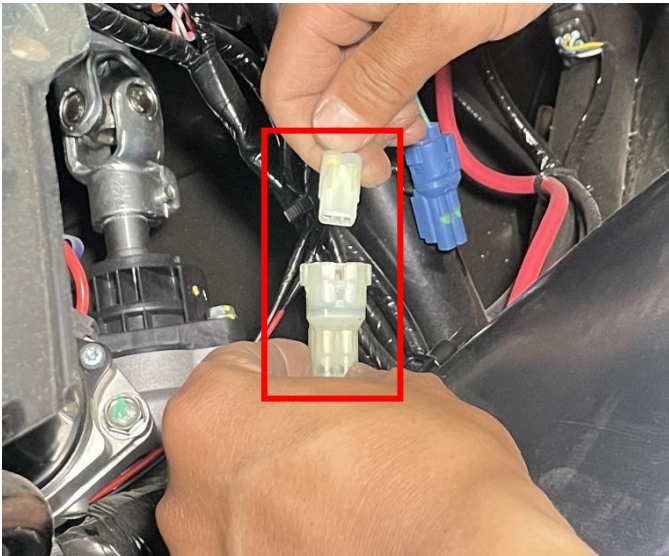

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

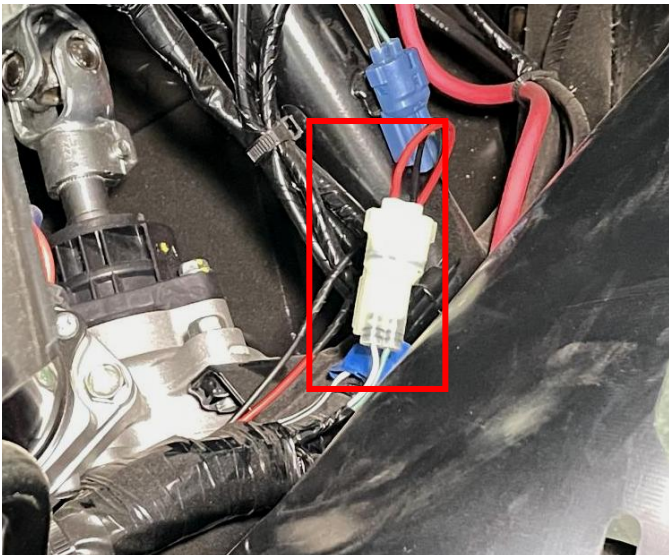

10. The installation is complete.

