

Combined Full Windshield For Honda Talon 1000

SAUTVS®

ZP-YJ-030911-003

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Combined Full Windshield is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Secure ①, ② and ③ with 14pcs M6*20 hexagon screws, 14pcs M6 Flat pads and 14pcs M6 lock nuts. As the picture shows:

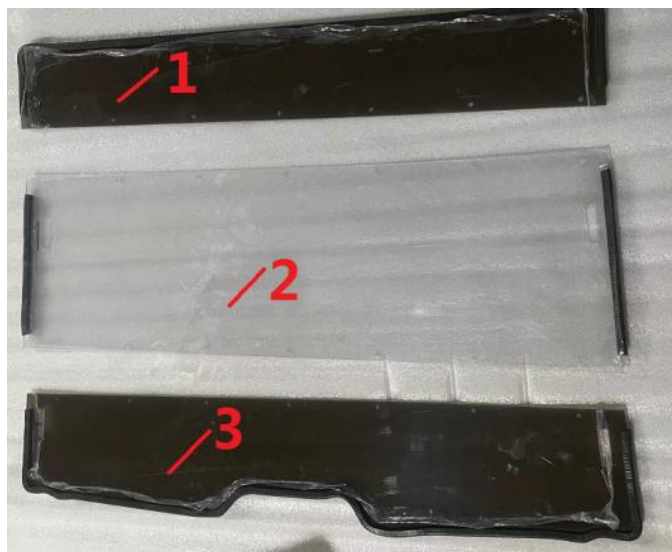

3. Use 2pcs M6*20 screws, 2pcs M6 flat pads, 2pcs M6 nuts and 2pcs M6*10 outer hex screws with pads to fix the windshield on the front frame with two iron brackets. As shown in the figure:



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.