

LED Tail Lights For Can-Am Maverick X3

ZP-YJ-030602-041

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This LED TAIL LIGHTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product images.



4. After removing the original tail light from the mounting frame, replace it with a new one.



3. As shown in the figure, first unscrew the screws on the rear taillight wing trim of the original vehicle, then remove the taillight mounting frame of the original vehicle and disconnect its wiring harness plug-in.

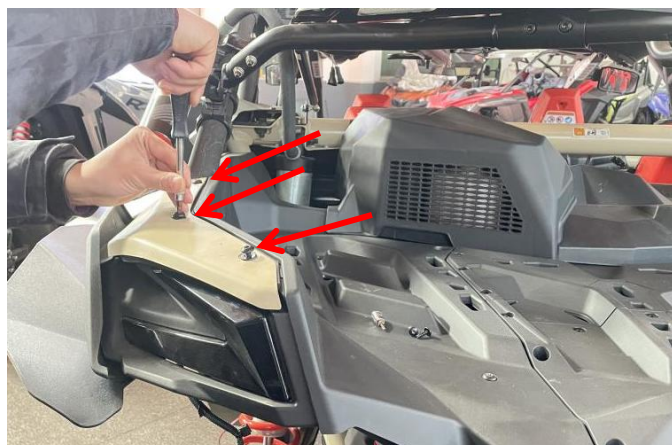


LED Tail Lights For Can-Am Maverick X3

ZP-YJ-030602-041

SAUTVS®



5. After reconnecting the tail light harness plug-in, then reinstall the tail light frame back into the original vehicle, and finally screw back the previously removed screws. (The other side is installed in the same way as above)

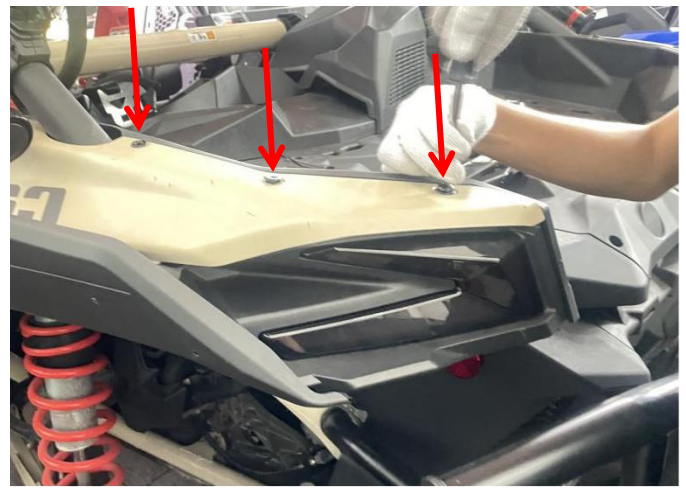

6. Installation complete.

