

# Right Side Bed Box for Polaris RZR XP 1000



ZP-YJ-030508-020

## BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

The Right Side Bed Box is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Picture of product

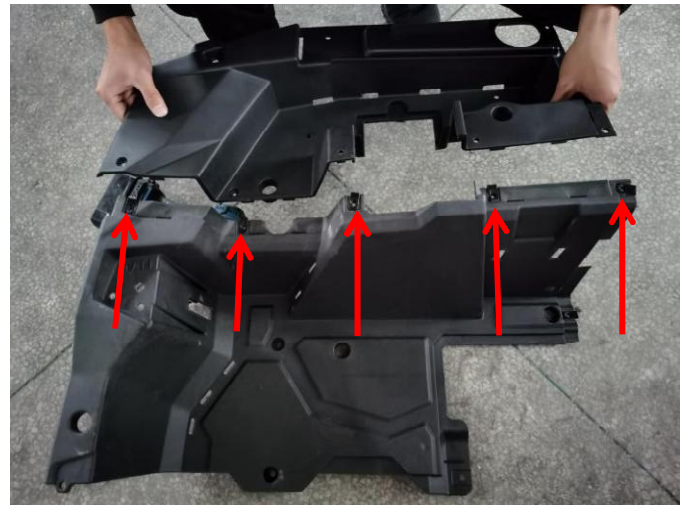

1. Assemble all the parts together, take out the steel clips from the accessories package and clamp the steel clips in the limit slots of the splicing edge, and then fix with screws. (After assembly, the reverse side also needs a steel clip, convenient for subsequent loading and fixing) As the picture shows:





# Right Side Bed Box for Polaris RZR XP 1000



ZP-YJ-030508-020



2. Remove the rear seat, C-pillar frame and spare tire support of the original vehicle, then remove the rear cargo box on the left side, and move the iron bracket on the original cargo box to the new cargo box according to the original position. As the picture shows:



3. Load the rear cargo box with the iron bracket onto the vehicle and use the screws of



# Right Side Bed Box for Polaris RZR XP 1000



ZP-YJ-030508-020

the original vehicle to fix it. The splicing place in the cargo box is directly fixed with the ball head screw of the original vehicle. Finally, the frame and other accessories removed before can be put back in place. As the picture shows:



4. Installation complete.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

