



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This SIDE REAR VIEW MIRRORS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

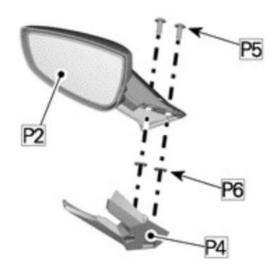

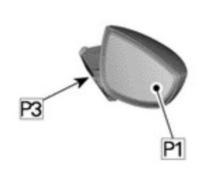


INSTALLATION INSTRUCTIONS

- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. On top of side deflector, align left side mirror assembly [P2] with left side fastening plate [P4].
- 3. Using this assembly as a template, mark positioning of holes (bold arrows) to be drilled through side deflector.

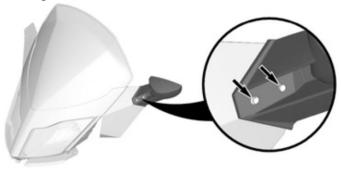

- 4. Drill 7.3 mm (9/32 in) holes where marked.
- 5. Clean surfaces and realign mirror and fastening plate to final fit.

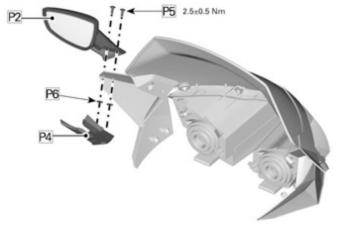

6. Repeat same procedure using right side mirror assembly [P1] with right side fastening plate [P3].