

Fender Flares for Honda Talon 1000

ZP-YJ-030910-006

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

These Fender Flares are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product and accessories.

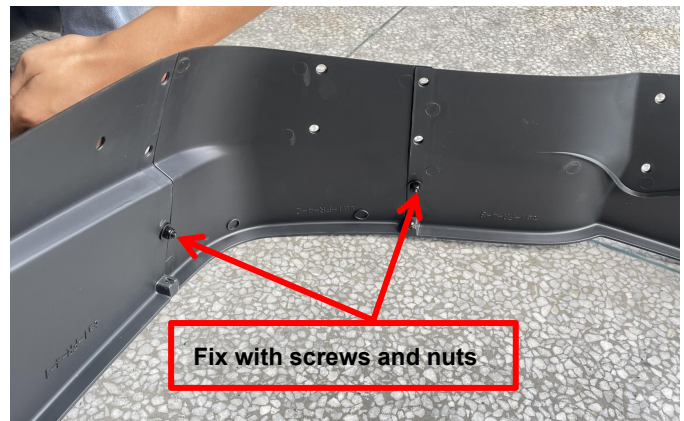

Installation steps for front fender flares:


1. First, assemble the split fender flares into a whole through screws. As shown below:



2. Install the assembled fender flares onto the original vehicle fender flares, and use 6MM and 8mm drill bits to drill fixing holes according to the positioning holes on the added fender flares. Then, use screws and nylon buckles for fixation. As shown below:

Fender Flares for Honda Talon 1000

ZP-YJ-030910-006



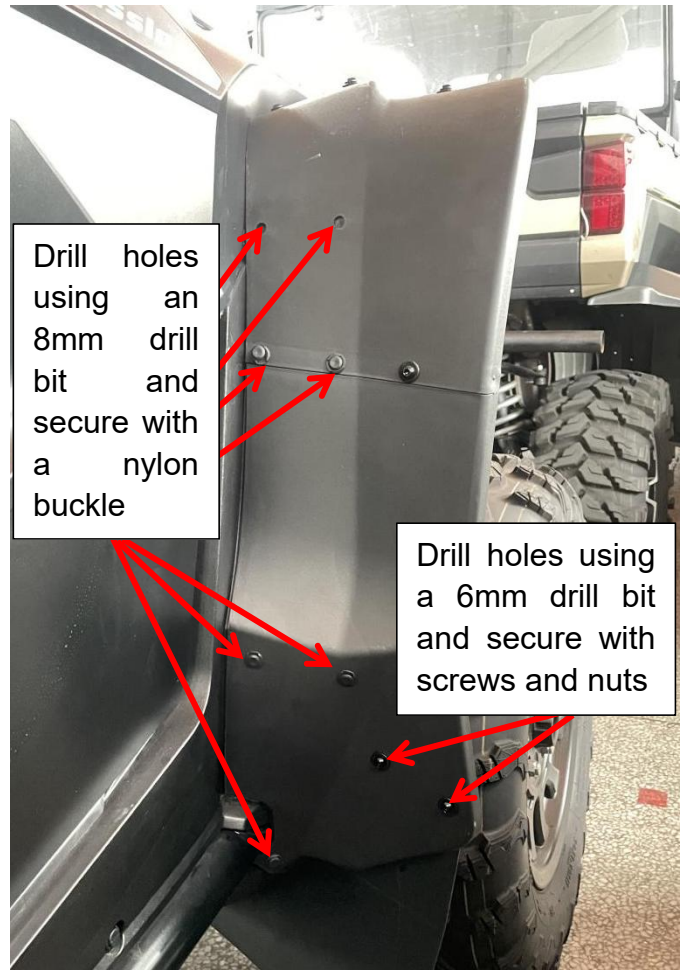


3. Finally, install the mudguard on the fender flares. First, pry out the snap fastener on the original vehicle mudguard, and then install the upper mudguard before reinstalling the snap fasteners. As shown below:



Fender Flares for Honda Talon 1000


ZP-YJ-030910-006

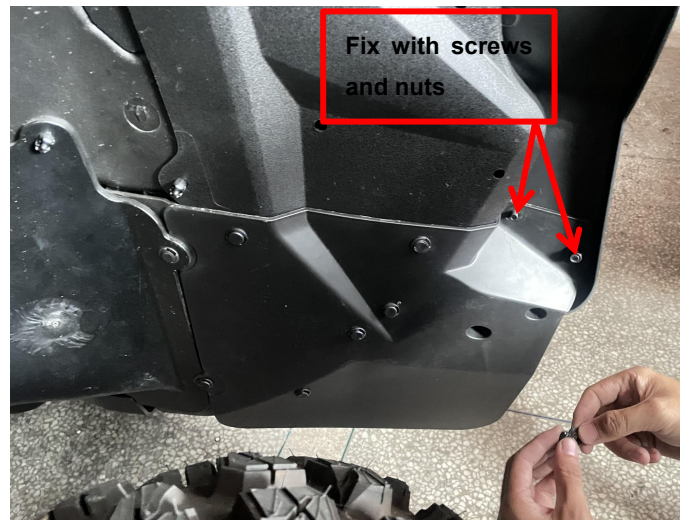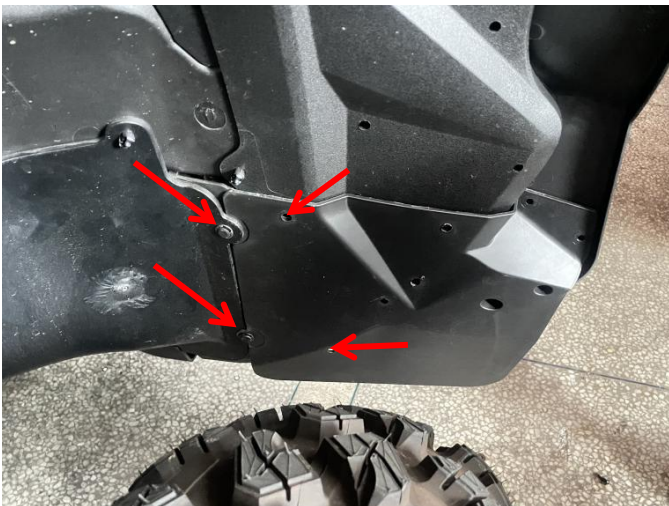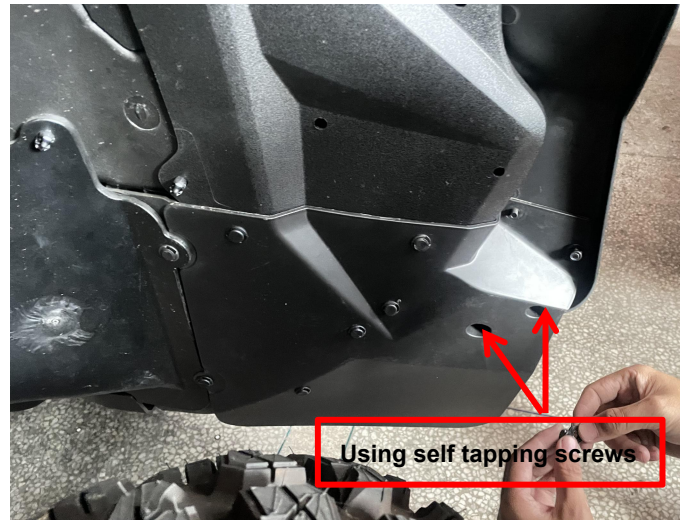

4. Using an 8mm drill bit, punch the hole positions in sequence according to the positioning holes on the mudguard, then use a snap fastener to fix them, and use screws and nuts to fix the remaining screw holes. As shown below:

Installation steps for rear fender flares:

5. Referring to the installation method of the front fender flares, first assemble the split fender flares into a whole through screws. As shown below:

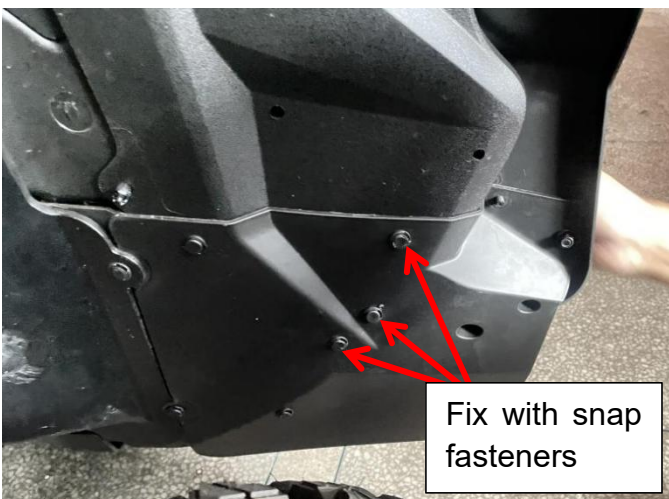

Fender Flares for Honda Talon 1000


ZP-YJ-030910-006



6. Install the assembled rear fender flares onto the original fender flares, and use 6MM and 8mm drill bits to drill fixing holes according to the positioning holes on the added fender flares. Then, use screws and nylon buckles for fixation. As shown below:



7. Take out the iron bracket that comes with the product and fix one end of the bracket to the wheel arch and the other end to the original rear cargo box of the vehicle. As shown below:
Note: It is necessary to drill a fixing hole with a 6mm drill bit in advance based on the position of the iron bracket on the rear cargo box, and then use screws and nuts for fixation.

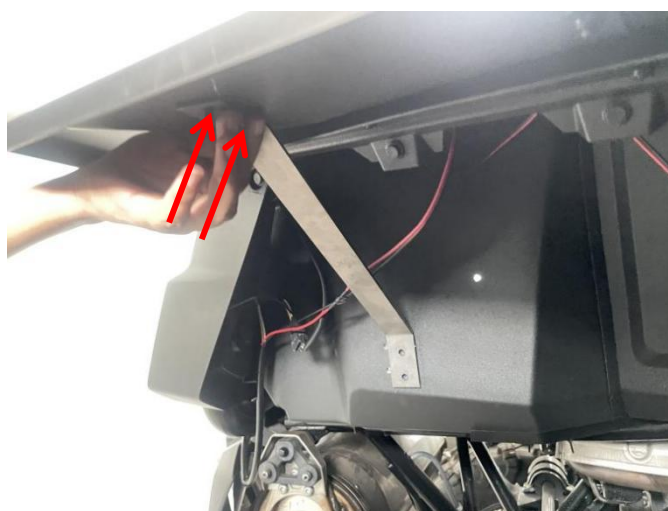

Fender Flares for Honda Talon 1000

SAUTV5

ZP-YJ-030910-006



8. The installation is complete.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.