

## **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

These Rear Wheel Well Block Offs are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS


Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Product picture



2. Place the rear wheel well block off at the air inlet of the rear door and secure it with the self tapping screws provided with the product. (Installed in the same way on the other side).As shown below:



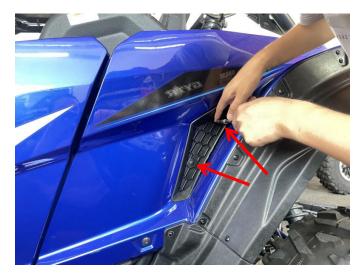

Installation finished.



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.