

LED Front Accent Light for Can-Am Spyder RT

ZP-YJ-030602-042

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This LED FRONT ACCENT LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. First remove the trim panels on both sides of the vehicle seat cushion and the front storage box.

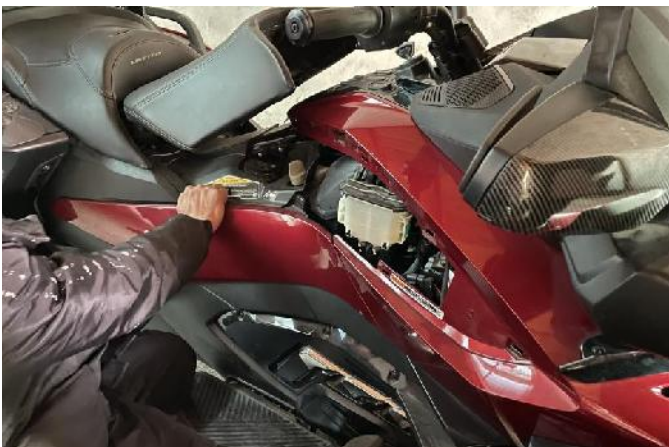

LED Front Accent Light for Can-Am Spyder RT


ZP-YJ-030602-042

4. Remove the radiator shield on the front storage box and the decorative outer frame below the storage box.



5. Remove the trim strip from the vehicle and install this product.

(NOTE: Before the installation of this product, it is necessary to borrow a tool to cut out an opening next to the installation anchor point, pass the wire harness through the incision, and then use the original screw of the vehicle to fix it. The size of the incision is consistent with the size of the outlet seat on the decorative rear shell.)

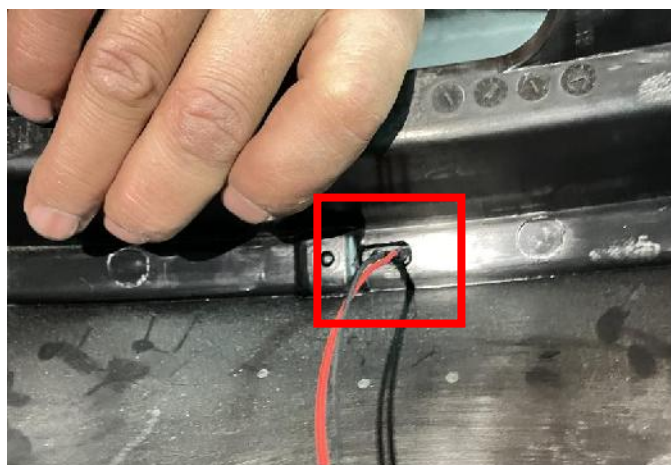

LED Front Accent Light for Can-Am Spyder RT

ZP-YJ-030602-042

SAUTVS®



6. After the product installation is completed, one end of the supporting adapter cable is connected to the plug-in reserved for the vehicle, and the other end is connected to the wiring harness plug-in of the product, after which the vehicle is started to see if the light are normally lit, and then assemble the parts after confirming that it is correct.

(NOTE: The wiring harness on the light needs to be plugged into the connector that comes with the accessories.)



7. Installation completed.

