

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

The Roof is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.




INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture

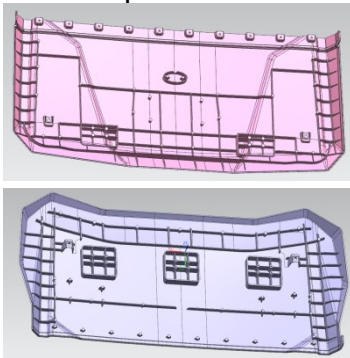

1. Stick the sponge strip to the edge of the roof surface, and then assemble the roof into a whole with self-tapping screws. The ends of the assembly position need to be fixed with screws and U-shaped nuts. As the picture shows:

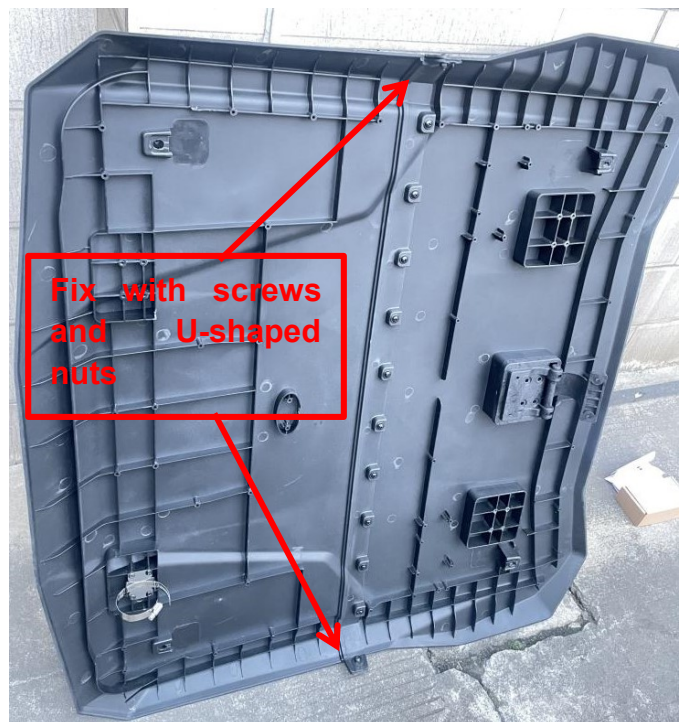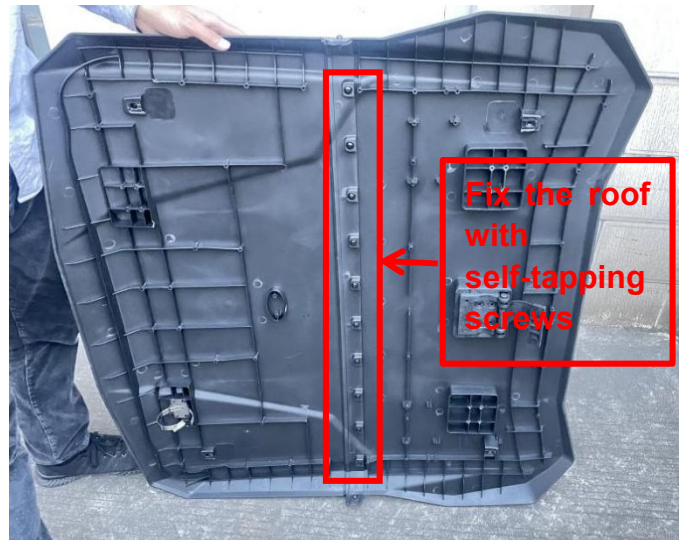
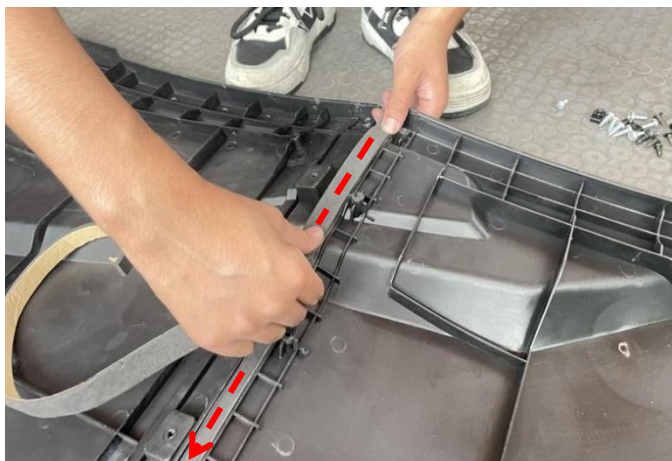




2. Fix the two iron square mounting brackets in the package to the roof with self-tapping screws. As the picture shows:



3. After assembling the plastic fixing clips in the package, fix them on the roof with self-tapping screws, and then clip the steel clips on the four limit slots of the roof. As the picture shows:

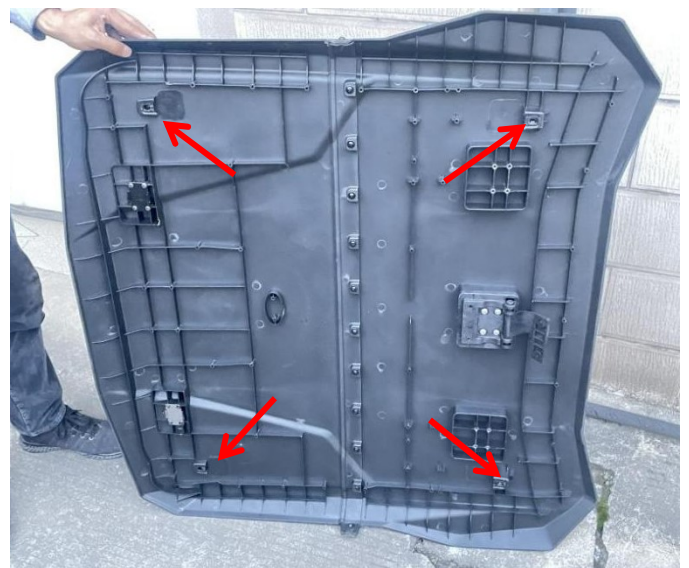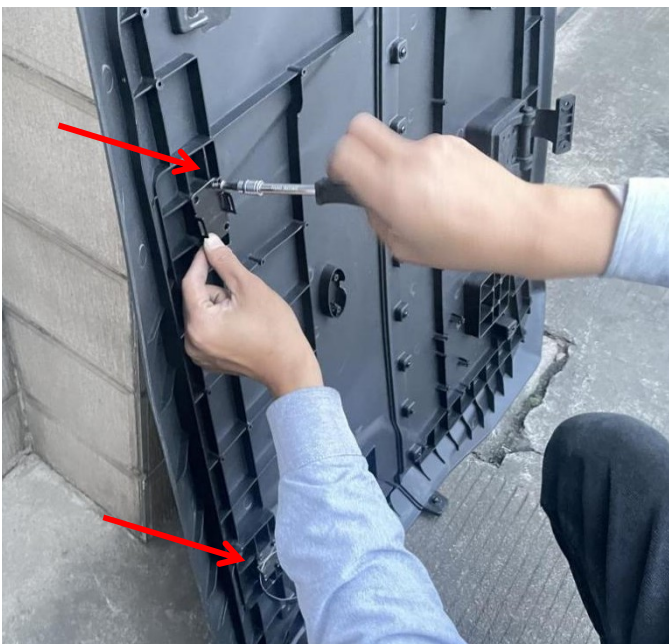



4. Reinforce the four corners of the roof with screws (the four places where steel clips were placed in advance).

Note: Use M6X14 hexagon socket screws at the front end of the vehicle. M6X16 hexagon socket screws are used in the rear of the vehicle.



5. Place the assembled roof on the vehicle, use the steel hoops in the package to pass through the mounting bracket on the roof and fix them to the original vehicle frame. As shown in the picture:



6. After the roof plastic fixing clips are wrapped around the original vehicle frame, tighten them with M6X16 screws. As the picture shows:



7. Installation finished.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.