

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Front Full Windshield is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. Assemble the part 1 and part 2 by M6*20 inner hexagon screws(5pcs), M6 flat washers(5pcs), M6 lock nuts(5pcs). As shown in the picture:

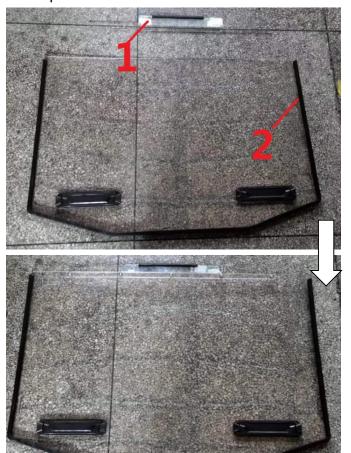

3. Remove the four screws on the front end of the plastic roof of the original vehicle, insert the lower end of the windshield into the gap of the front cover, and the upper end of the windshield against the front upper beam, as shown in the picture:





Front Full Windshield For Polaris RZR XP 1000 2024

ZP-YJ-030511-018





4. Tighten the four screws of plastic roof and fix the upper end of the front windshield on the front upper beam with two small ties, as shown in the picture:





5. Fix the front windshield on the front pillars with 2 small ties and 4 large straps, as shown in the picture, installation completes.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.