

# Sport Hood Scoop with LED Spotlight for CFMOTO ZFORCE 950

ZP-YJ-031203-003

SAUTVS®

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Sport Hood Scoop with LED Spotlight* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## PRODUCT




## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove the original front hood scoop of the vehicle first, and then move the hood clips to the new hood. As the picture shows:




3. Take out the 2 extension cables in the accessories. One of which is connected to the vehicle's battery box, and the other is connected to the negative pole of the vehicle's electricity. After that, disconnect the rear half of the plug-in of the spotlight wiring harness of the hood. Then connect it with the other end of the two extension cables and do insulation protection well (one is black, and the other is red). As shown in the figure:

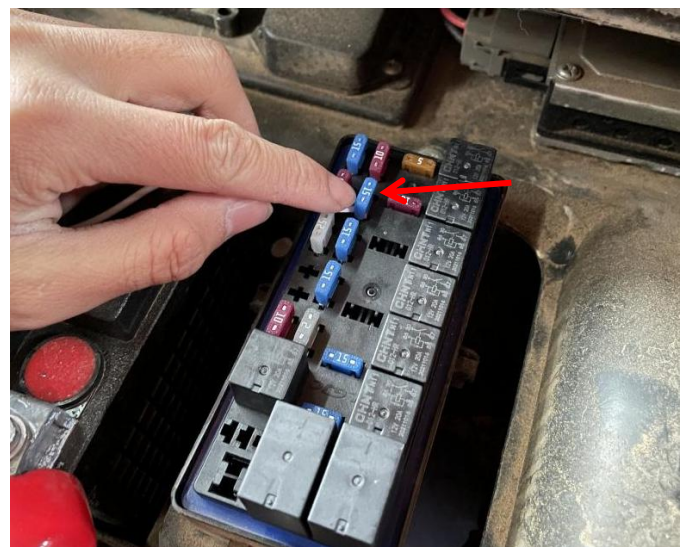


# Sport Hood Scoop with LED Spotlight for CFMOTO ZFORCE 950

ZP-YJ-031203-003


SAUTVS<sup>®</sup>

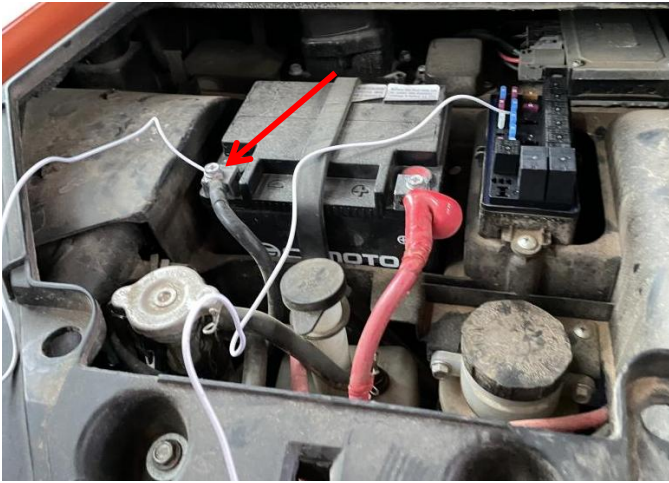

5. The installation is complete.

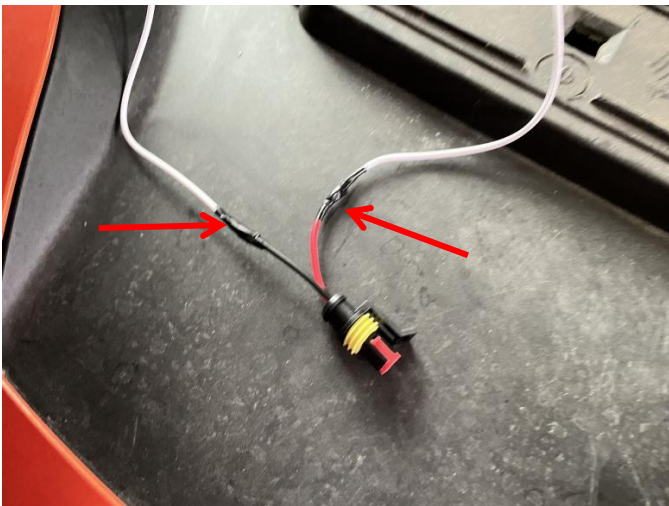

4. Connect the adapter plug-in to the spotlight wiring harness plug-in. Then put the hood scoop back onto the vehicle and fasten the hood clips. As the picture shows:

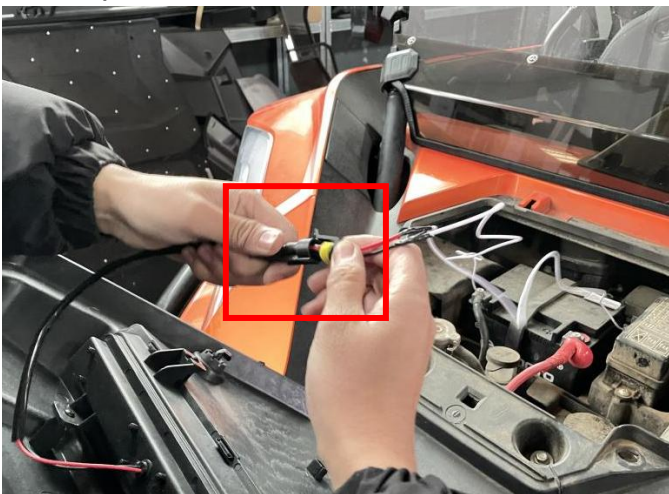

**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.