

# Turbo Hood Scoop with LED Spot Light for Polaris Ranger XP 1000



ZP-YJ-030503-141

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

The *Turbo Hood Scoop with LED Spot Light* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.


Product picture



1. First remove the original hood, then take out the new turbo hood, and transfer the hood switches to the new hood. As the picture shows:

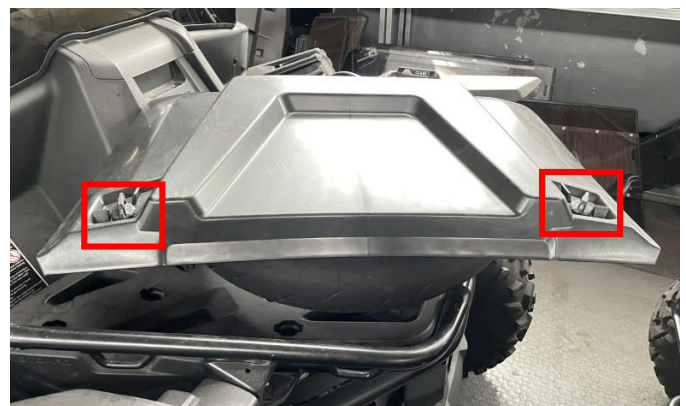

2. Find the wiring harness of the original headlights, break the outer skin of the wire of the negative electrode (brown wire) and the high beam (yellow wire), and then take out the two extension wires in the accessories package to connect them respectively, and finally connect the other ends of the extension wire to the wire of adapter harness plug-in (black connected to the brown wire, red connected to the yellow wire), and do the insulation protection. As the picture shows.

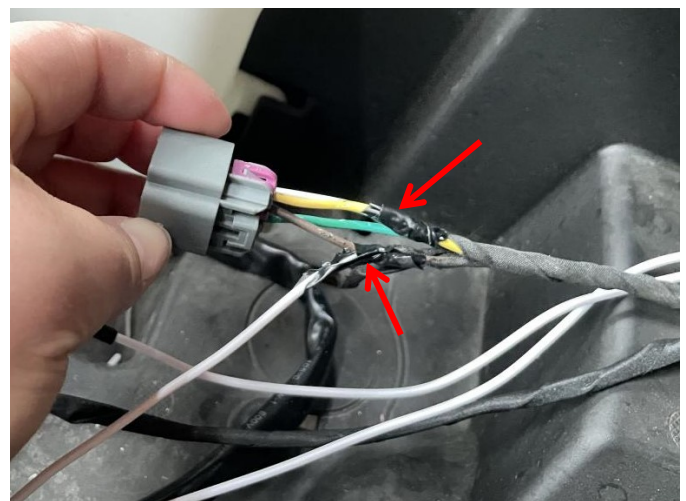

# Turbo Hood Scoop with LED Spot Light for Polaris Ranger XP 1000




ZP-YJ-030503-141



3. Connect the adapter harness plug-in to the spotlight harness plug-in.



5. The installation finished.

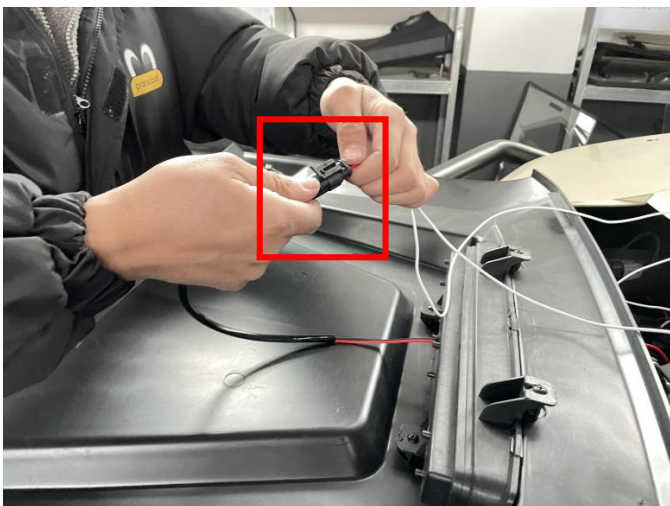

4. Install the new turbo hood on the vehicle, lock the switches. As the picture shows:



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.