

# Fender Flares For Can Am Commander

ZP-YJ-030610-015

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT

This FENDER FLARES KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture



1. First, assemble the front and rear fender flares of the split into a whole using the matching M6 \* 16 and M4 \* 14 self tapping screws, and then use them as a backup. As the picture shows:



2. First, install the front fender flares: First, unscrew one screw from the original fender flares, and then place the assembled widened fender flares on the original fender flares (the fixing holes need to be aligned with the holes reserved in the original vehicle). Then, screw the original vehicle screws back in place and use the self tapping screws 5 \* 16 provided with the product to fix the fender flares. As the picture shows:



# Fender Flares For Can Am Commander

ZP-YJ-030610-015



3. Use nylon buckles to reinforce the remaining installation holes. As the picture shows:

Note: One of the fixing holes requires the use of an extended buckle.

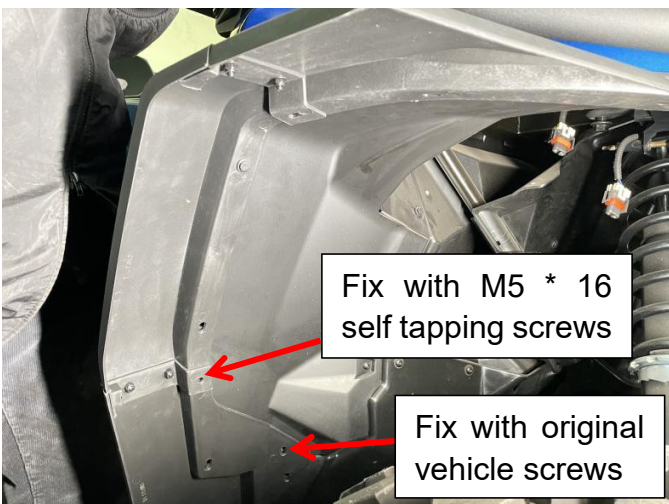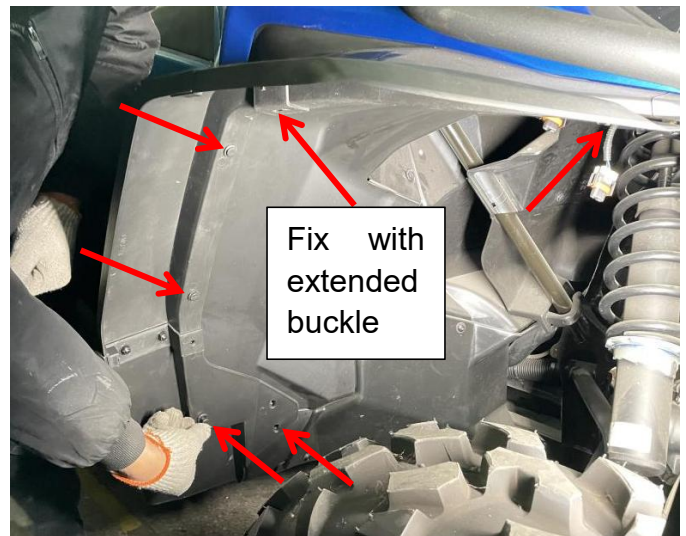


# Fender Flares For Can Am Commander

## ZP-YJ-030610-015


4. Before installing the rear fender flares, the cargo box needs to be raised first, and then the shorter fender flares should be placed on the original vehicle. Then, nylon buckles should be used to fix them in sequence (the fixing holes need to be aligned with the holes reserved in the original vehicle). As the picture shows:

Note: One of the fixing holes requires the use of an extended buckle.

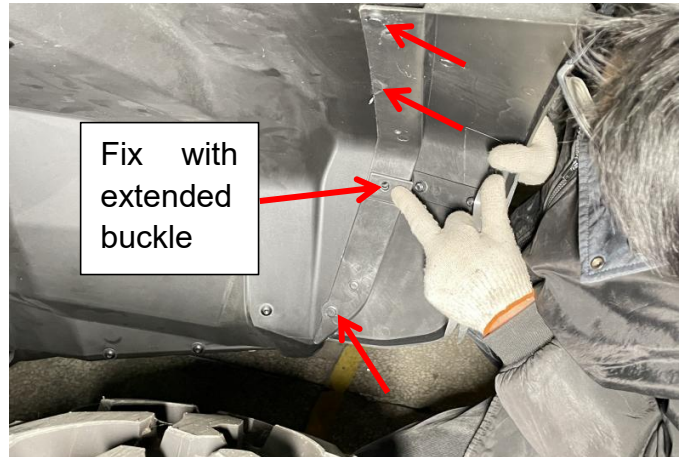

5. When installing the rear cargo box fender flares, it is necessary to first unscrew the original vehicle screws and buckles, then place the fender flares on the original vehicle, and then screw the screws that have just been removed back into their original positions (or use the product's matching screws M6 \* 25). Then prepare a 4mm drill bit to drill holes at the positions marked in the picture, and fix them with M5 \* 16 self tapping screws. (Install and fix the fender flares on the other side in the same way as above). As the picture shows:


Note: The original position of the buckle needs to be replaced with an extended buckle that matches the product, and then fixed.

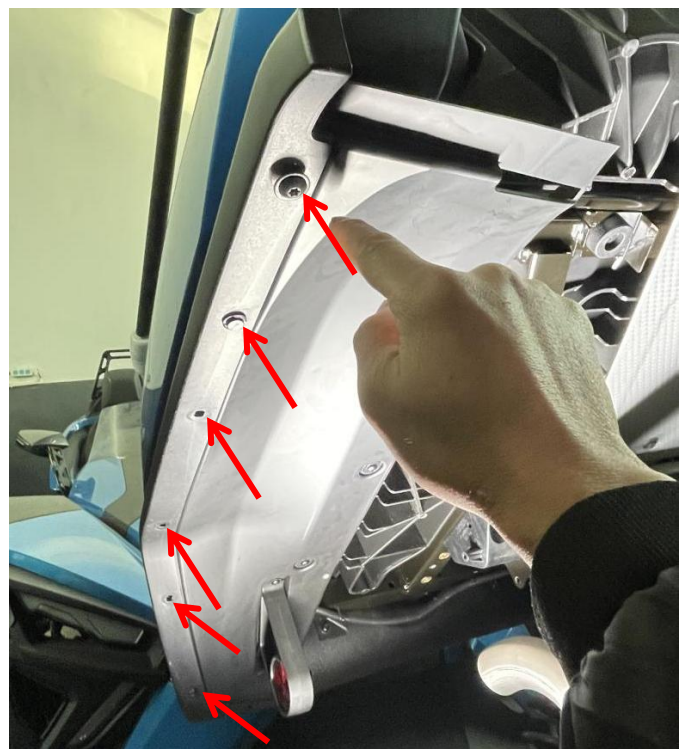


# Fender Flares For Can Am Commander

ZP-YJ-030610-015

SAUTV5

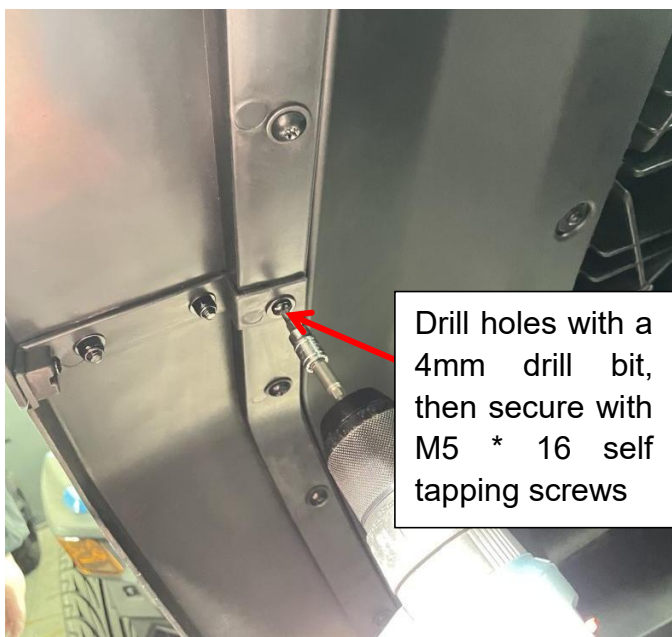

6. Installation completed.

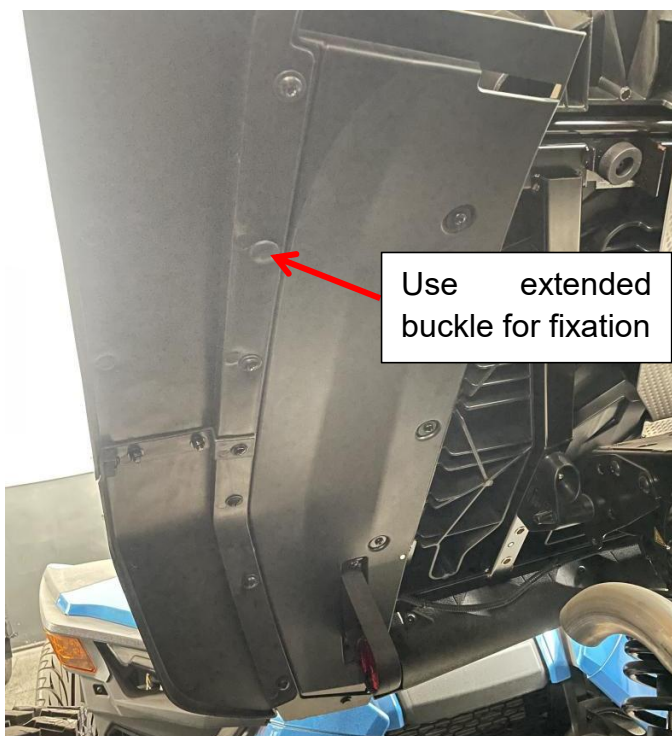

**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.