

ROPS-Mounted Side Mirrors for Polaris Ranger XD 1500

SAUTVS®

ZP-YJ-030505-028

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This ROPS-Mounted Side Mirror is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

PRODUCT




INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. First, pry off the buckle fixing the A-pillar guard plate and remove the plate. Find the two dimples reserved on the guard plate, and Then use the tool to drill a circular hole with a diameter of 15mm from the center of each dimple. As the picture shows:




3. Fix the base support of the mirror to the A-pillar with M6*20 screws, reinstall the A-pillar guard plate and secure the buckle. Finally fix the mirror to the base support with M8*45 screws. (The other side mirror is installed in the same way as above). As the picture shows:

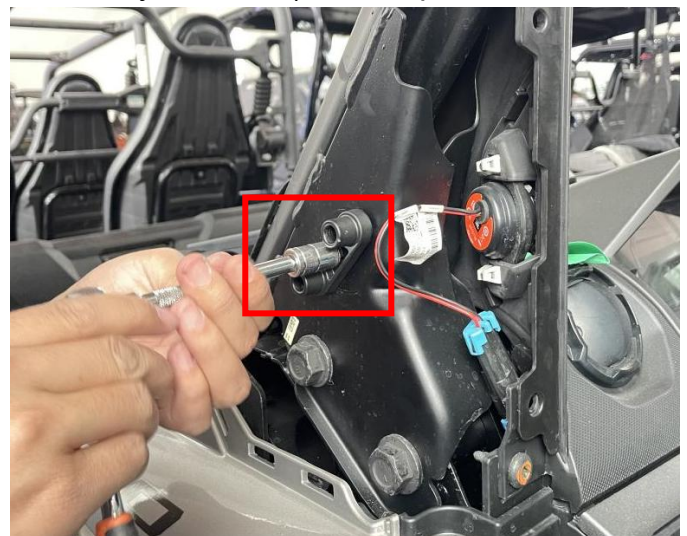

ROPS-Mounted Side Mirrors for Polaris Ranger XD 1500

ZP-YJ-030505-028

SAUTV5

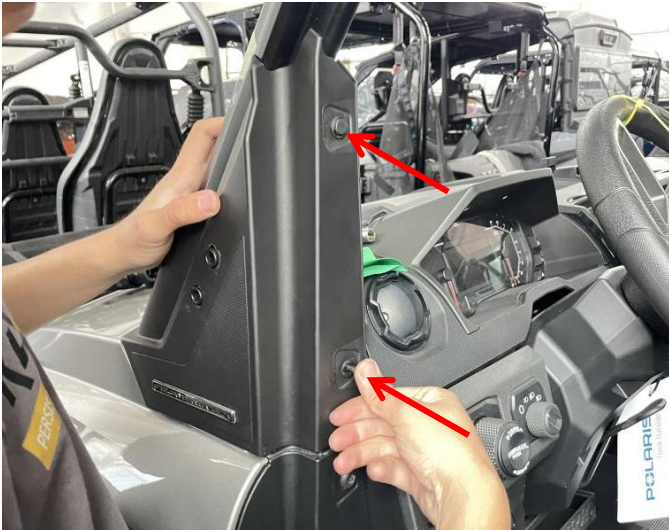

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.



4. The installation is complete.

