

Front Bumper for Can-Am Commander



ZP-YJ-030606-011

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

The Front Bumper is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Assemble Parts 1, 2 and 3, 4 through 4 bushings (Part 5) using 8 pieces M8*50 hex screws and 8 pieces M8 locknuts. As shown in picture:

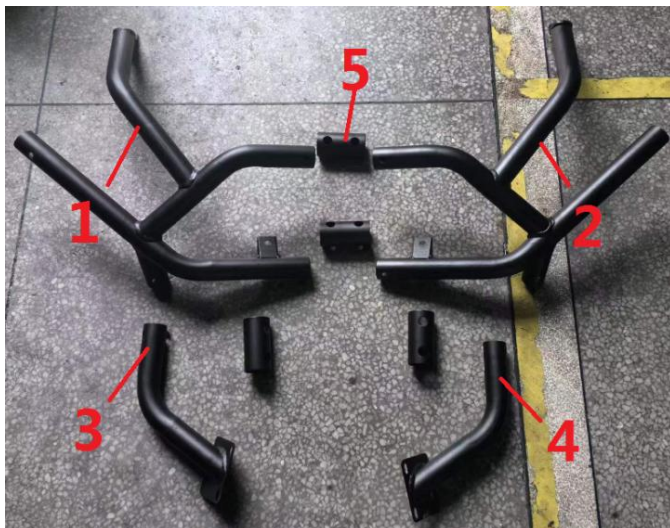

2. Remove the six screws below the front of the frame for use. As shown in picture:

3. Fix the upper end of the front bumper to the frame with two M12 * 30 external hex screws. As shown in picture:

Front Bumper for Can-Am Commander



ZP-YJ-030606-011



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

4. Fix the lower end of the front bumper on the frame with the six screws just removed, as shown in the picture, tighten all screws and nuts, and complete the installation.