

Rear Cargo Storage Box For Can-Am Maverick R

ZP-YJ-030608-013

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This REAR CARGO STORAGE BOX KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. Snap the fixing bracket at the bottom of the storage box and the fixing lock into the original vehicle latch, then open the lid of the storage box and lock the safety valve from the inside.

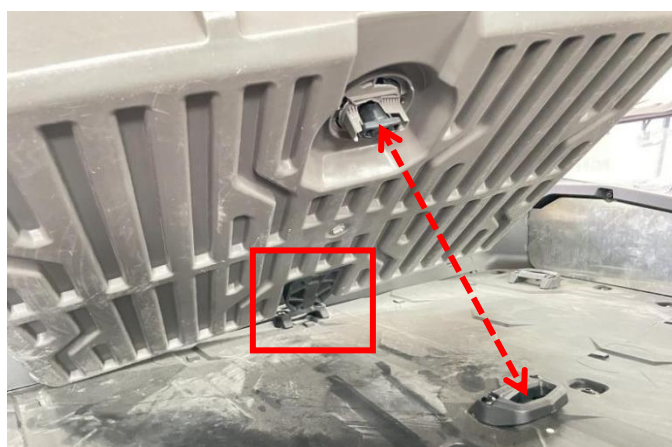

4. Installation completed.

