

Rear Bumper Guard For Can-Am Outlander 500

ZP-YJ-030606-016

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This *Rear Bumper Guard* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

PRODUCT AND ACCESSORIES




4. Secure inner support with M6 X 50 machine Torx screws and M6 Elastic Hex Nut. Tighten to specification. The installation is complete.

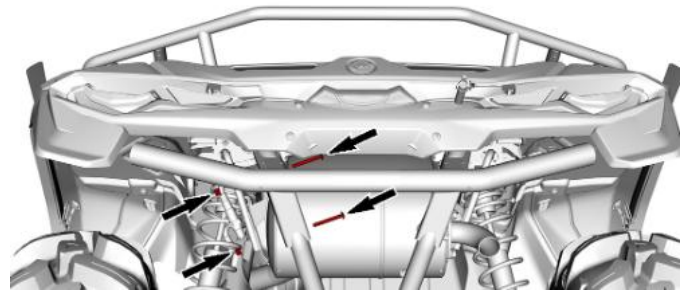


INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Place the rear bumper on top of the vehicle's grab bar.

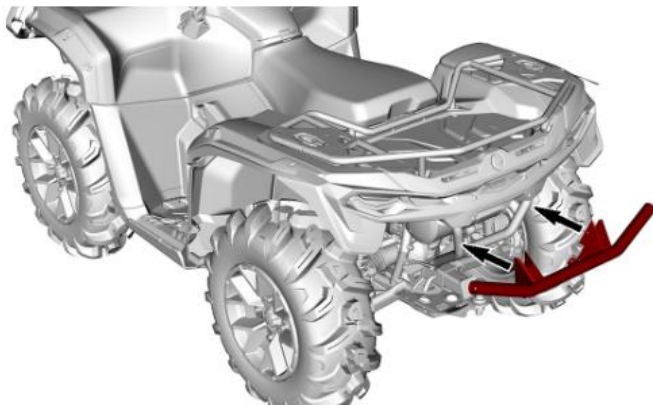

3. Place the inner support. Orient the part with the angle towards the top as shown.

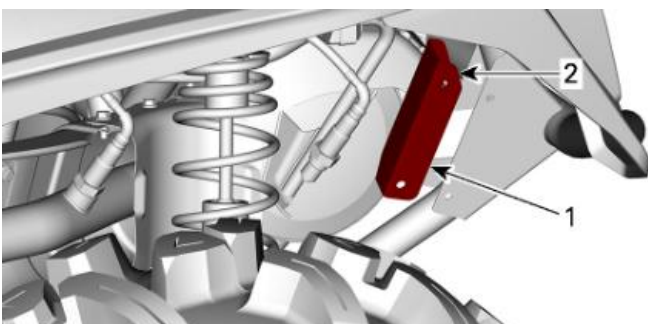

1. Inner support
2. Angle to be oriented upwards

TIGHTENING TORQUE

TIGHTENING TORQUE	
M6 Elastic Hex. nut	10 ± 2 N•m (89 ± 18 lbf•in)

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.