

# Front Mesh Grill with Spotlight and DRL Turn Signal Lights for Polaris XPEDITION ADV/XP



ZP-YJ-030503-149

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

This *Front Mesh Grill with Spotlight Kit* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture and accessories



1. First, remove the original front mesh grill, and move the fixed valves of the original mesh grill to the new mesh grill, connect the two wiring harnesses in the accessory bag to the wiring harnesses of the turn signal lights on the mesh grill. Then prepare an extension wire, the negative wires of the two turn signal lights are connected in series to one end of the extension wire, the connection interfaces must be insulated. As the picture shows:

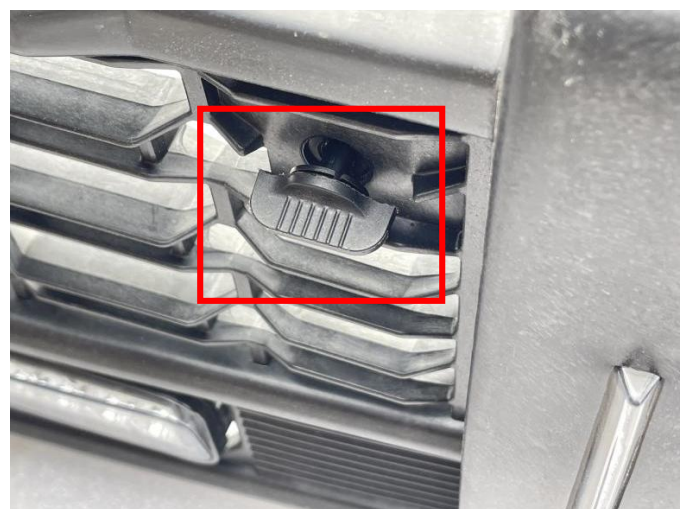

# Front Mesh Grill with Spotlight and DRL Turn Signal Lights for Polaris XPEDITION ADV/XP

ZP-YJ-030503-149



2. Connect the other end of the extension wire to the negative terminal of the original vehicle battery. As the picture shows:

**Note:** Owner needs to purchase a steering strobe device by yourself, and connect the positive wire harnesses of the turn signal lights of mesh grill to the strobe device, so that the vehicle can use the turn signal function.

3. Pull the wiring harness of the center spotlight to the headlight on the driver side through the gap of the vehicle, and disconnect the wiring harness of the original vehicle headlight, use the conversion wire matching with the center spotlight to re-connect the original vehicle headlight and the vehicle wiring harness, and finally connect the plug-in reserved on the conversion wire (the plug-in of the black and white wire) to the spotlight wiring harness. As the picture shows:



**Note:** The harness must be connected to the headlight on the driver side.

# Front Mesh Grill with Spotlight and DRL Turn Signal Lights for Polaris XPEDITION ADV/XP


ZP-YJ-030503-149



then lock the fixed valves. As the picture shows:

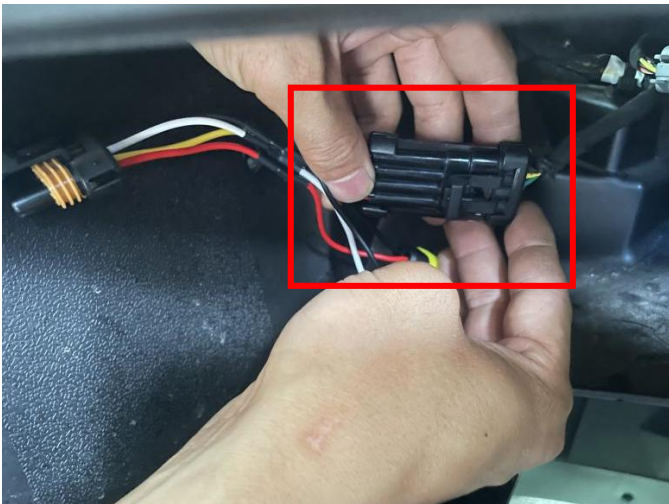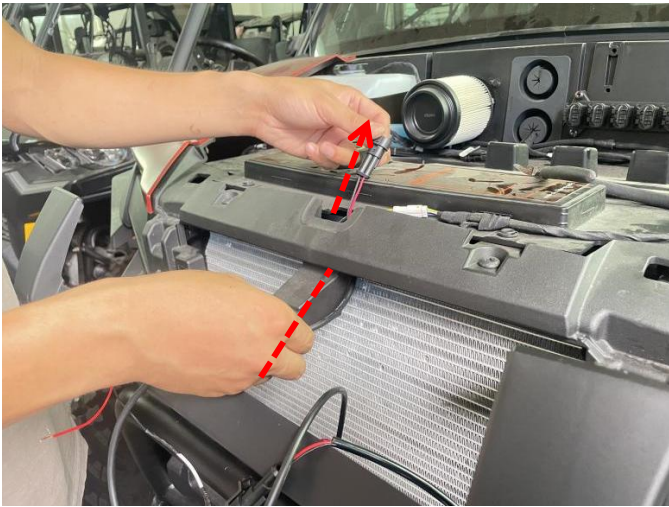

5. Installation finished.

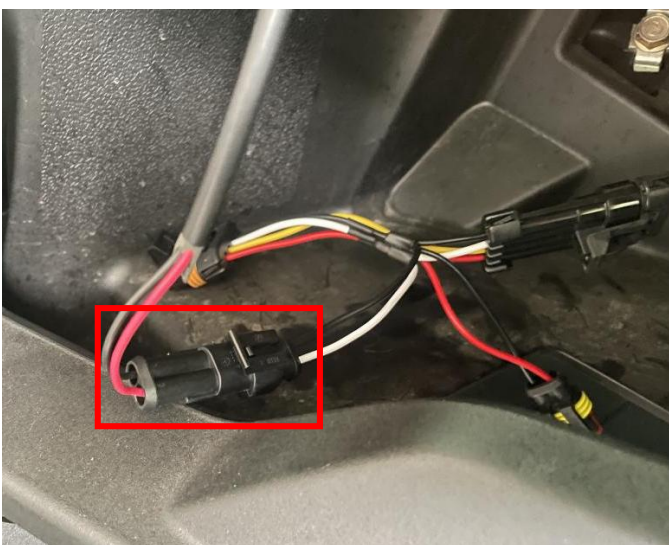

4. Finally start the vehicle to check whether the spotlight is lit on normally, and after confirmation, the original engine cover can be installed back on the vehicle, and then the new mesh grill can be installed on the vehicle, and

# Front Mesh Grill with Spotlight and DRL Turn Signal Lights for Polaris XPEDITION ADV/XP



ZP-YJ-030503-149

---



**Note:** Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.