

Low Profile Rock Sliders for Polaris RZR XP 1000 2024 2-Seat



ZP-YJ-030506-037

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

This *Rock Sliders Kit* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. First assemble parts L1, L2, and L3 through casing tube A and C with four M8*50 hex screws and four M8 locknuts. Assemble L1 and L2 at the lower ends with casing tube B with two M8*45 hex screws and two M8 locknuts. Don't tighten the screws, and assemble the right side bar in the same way. As the picture shows:

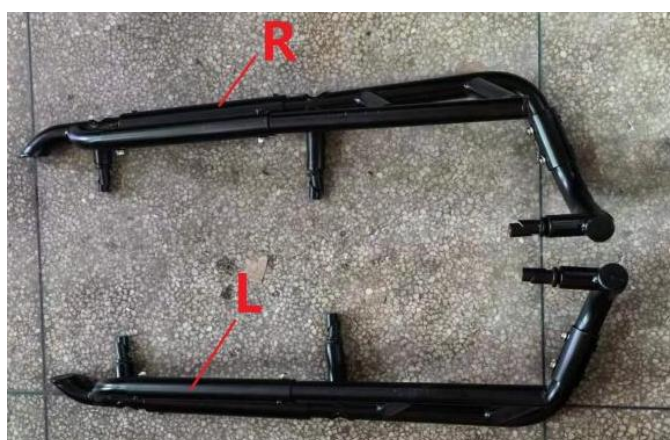

2. Install the casting on the side bar with six M8*55 hex screws and six M8 flat washers, do not tighten the screws.



3. Install the side bar to the three mounting holes at the lower end of the vehicle frame.



Low Profile Rock Sliders for Polaris RZR XP 1000 2024 2-Seat



ZP-YJ-030506-037



4. Tighten the 6 mounting screws, and then tighten the 12 connecting M8 screws.



5. Installation finished.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.