

Low Profile Rock Sliders for Polaris RZR XP 4 1000 2024 4-Seat



ZP-YJ-030506-038

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

This *Rock Sliders Kit* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK".
Turn key to "OFF" position and remove from vehicle.

1. First assemble parts L1, L2, and L3 through 2 pieces of casing tube A with four M8*50 hex screws and four M8 locknuts. Assemble L1,L2 and L3 at the lower ends with 2 pieces of casing tube B with four M8*45 hex screws and four M8 locknuts. Then use two M8*50 hex screws and two M8 locknuts to install L4 through casing C at the top position. The right side bar is assembled in the same way.

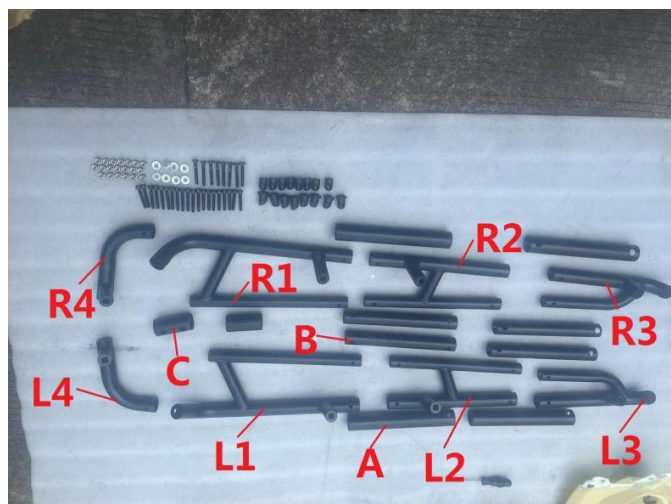

2. Install the castings on the side bars with eight M8*55 hex screws and eight M8 flat washers, don't tighten the screws.

Low Profile Rock Sliders for Polaris RZR XP 4 1000 2024 4-Seat



ZP-YJ-030506-038




3. Install the side bar to the four mounting holes at the lower end of the vehicle frame.



Low Profile Rock Sliders for Polaris RZR XP 4 1000 2024 4-Seat



ZP-YJ-030506-038

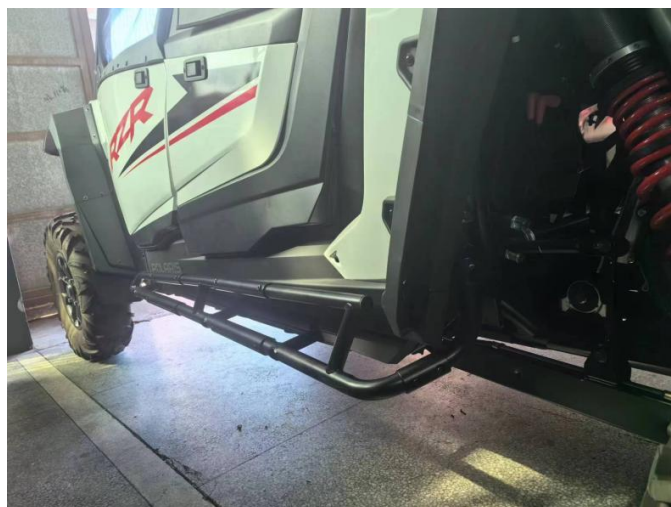

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

4. Tighten the eight mounting screws, and then tighten the twenty connecting M8 screws. The installation finished.

