

LED DRL Auxiliary Lights for Can-Am Maverick R

ZP-YJ-030602-044

SAUTV5[®]

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This LED DRL AUXILIARY LIGHTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. Remove the hood of the original vehicle and the front fascia trim panel.

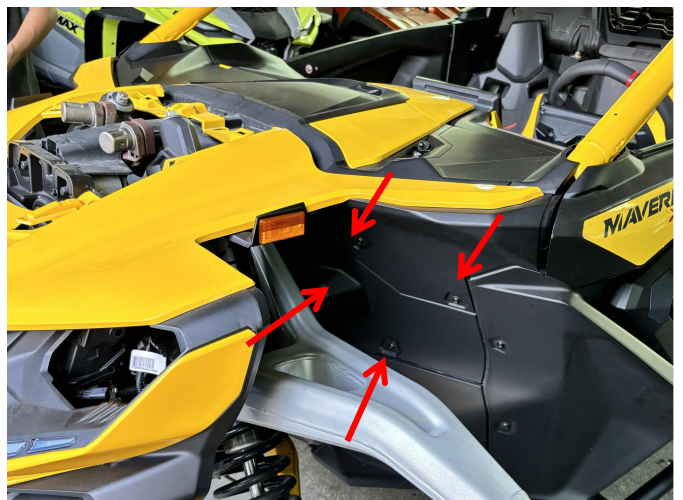

LED DRL Auxiliary Lights for Can-Am Maverick R

ZP-YJ-030602-044


SAUTV5



5. Install the new daytime running lights replacement to the front fascia, secure it using the original screws, and reattach it back to the trim bracket.




4. Remove the decorative brackets from the front fascia and the original daytime running lights.

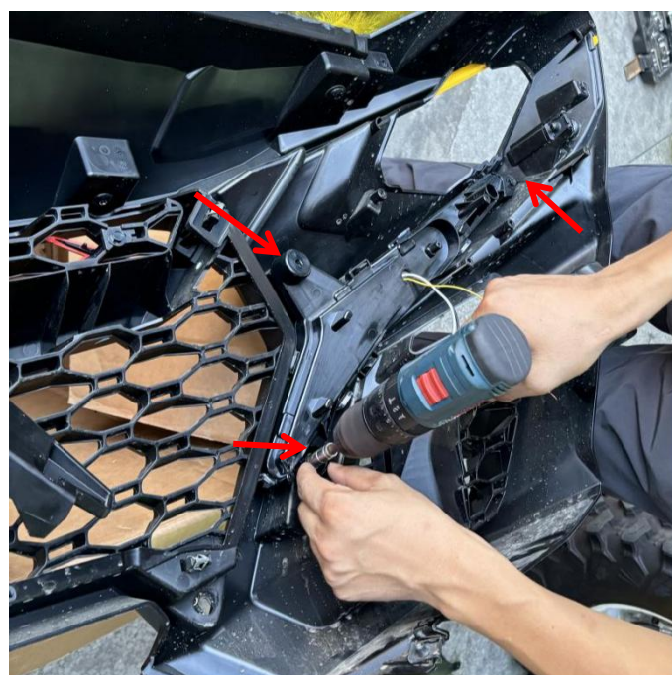

LED DRL Auxiliary Lights for Can-Am Maverick R

ZP-YJ-030602-044

SAUTV5

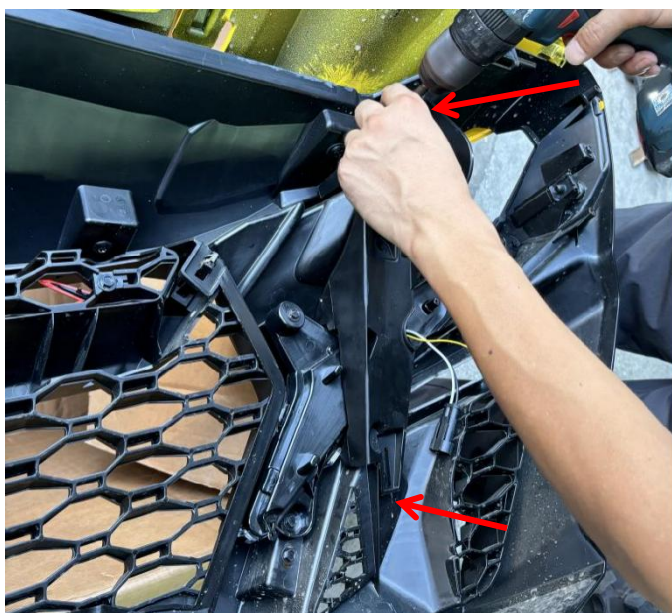

7. Installation completed.



6. Reinstall the front fascia with the replacement daytime running lights back into the original vehicle and connect the wiring harness plug-in for the daytime running lights.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

