

Smoked Black LED Taillights for Polaris XPEDITION ADV/XP



ZP-YJ-030501-021

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This *Taillight Kit* is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Product picture and accessories



1. First open the rear cargo taillight and remove the original taillights, disconnect the wiring harness plug-ins. As the picture shows:

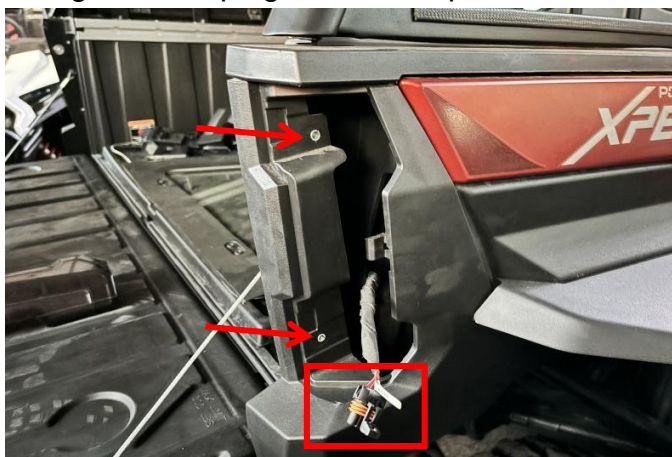


2. Install the steel clips in the kit on the rear shell of the new taillight, and then connect the wiring harness plug-ins of the original vehicle. As the picture shows:




Smoked Black LED Taillights for Polaris XPEDITION ADV/XP

ZP-YJ-030501-021

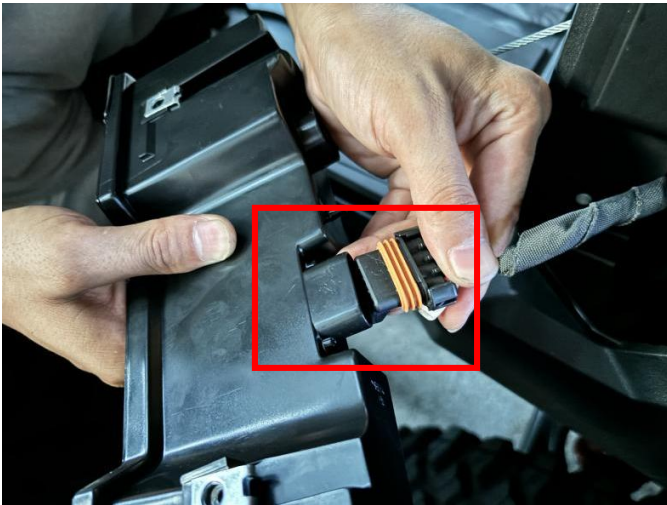

3. Start the vehicle, test whether the taillight is working properly, and then install the taillight after confirming it, and use M5*30 screws to fix it. (The other side of the taillight is installed in the same way as above). As shown in the picture:

Note: When the taillight is installed, the limit post on the rear shell should be stuck in the notch of the original vehicle

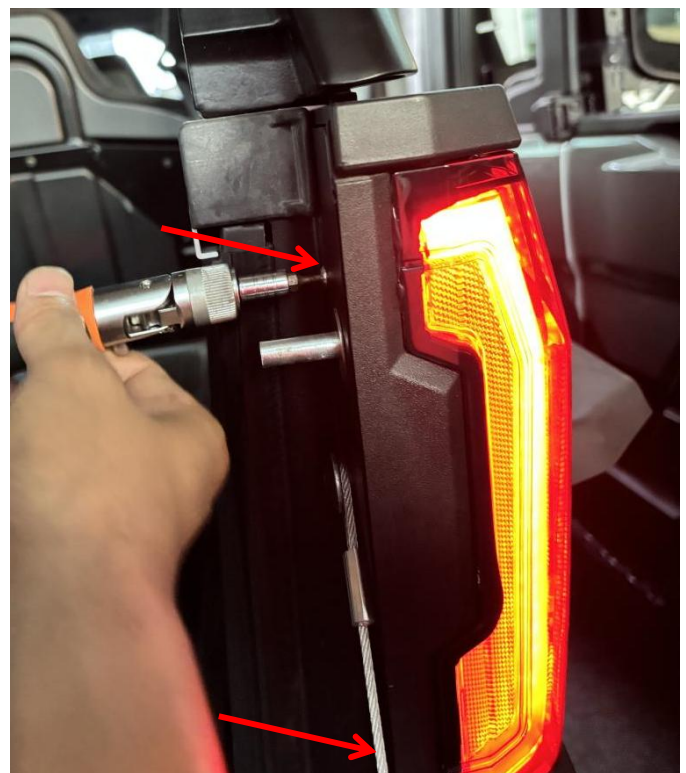

4. The installation is complete.

Smoked Black LED Taillights for Polaris XPEDITION ADV/XP



ZP-YJ-030501-021



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.