

Front Roof Speakers Pods for Can-Am Commander / Maverick Trail

ZP-YJ-030603-182

SAUTV5®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This FRONT ROOF SPEAKERS PODS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.
(This product does not include speakers)



3. First, fix the 2 types of iron brackets in the accessories to the speaker bracket in turn (use M6*16 screws).

NOTE:


- ① Pay attention to the mounting direction of the bracket;
- ② When installing the long iron bracket, you need to place a matching nut fingerprint plate in the corresponding position inside the speaker bracket to lock the screws.



Front Roof Speakers Pods for Can-Am Commander / Maverick Trail

ZP-YJ-030603-182

SAUTV5®

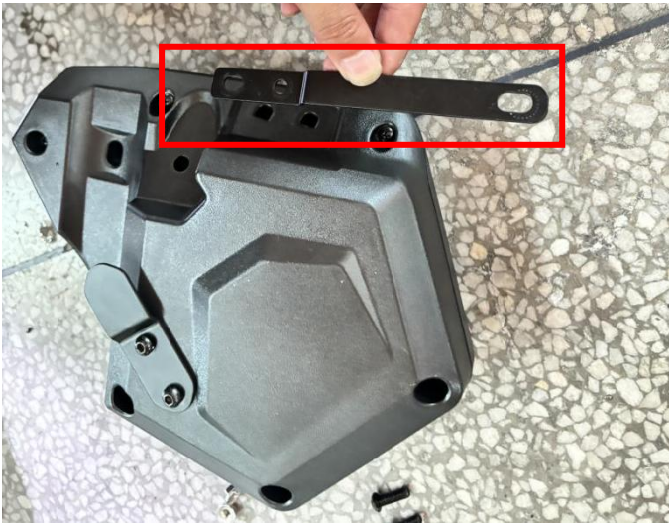

4. Use a special tool to rivet the rivet nuts from the kit into the pre-drilled holes in the top crossbar of the vehicle.



5. Install the speaker bracket on the roof rack and use M6*16 screws to fix it.

(The other side of the speaker bracket can be fixed and installed in the same way as above)



Front Roof Speakers Pods for Can-Am Commander / Maverick Trail

ZP-YJ-030603-182

SAUTV5®

6. Installation completed.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

