

LED Hood Scoop Spotlight for Can-Am Maverick R

ZP-YJ-030602-045

SAUTVS®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This LED HOOD SCOOP SPOTLIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.



3. Open the hood of the vehicle first (hold the hood with your fingers, push down and then lift up).



4. Mount the spotlight matching mounting bracket on the vehicle (there are reserved mounting fixing holes on the vehicle), and use self-tapping screws M5*16 for fixing.



LED Hood Scoop Spotlight for Can-Am Maverick R

ZP-YJ-030602-045


SAUTV5®



5. Use M6*16 socket head cap screws to fix the spotlight on the mounting bracket just now.




6. Prepare two extension cables, respectively, connected to the spotlight harness (the interface needs to be insulated to protect), and then open the vehicle's battery cover, will extend the cable through the cooling holes to the electrical box, and will extend the cable were connected to the positive and negative poles of the ACC, and then start the vehicle to see if the spotlight is normal light, to determine that the spotlight can be bright lights, and to tidy up the wiring harness, and then finally reinstall the battery box cover and hood cover.

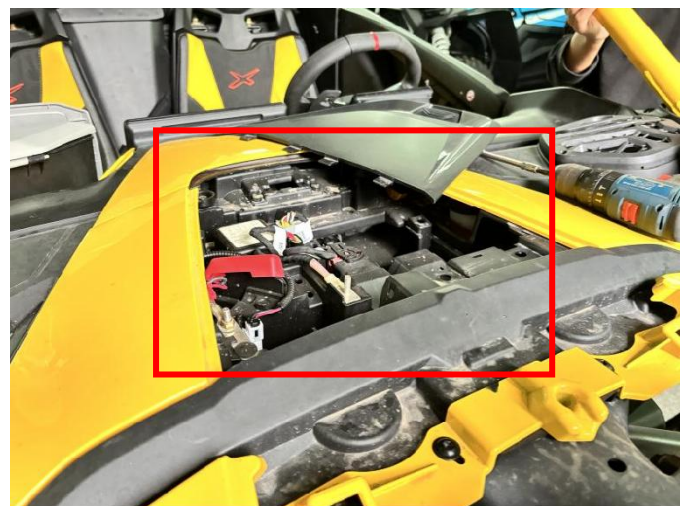

LED Hood Scoop Spotlight for Can-Am Maverick R

ZP-YJ-030602-045

SAUTV5[®]

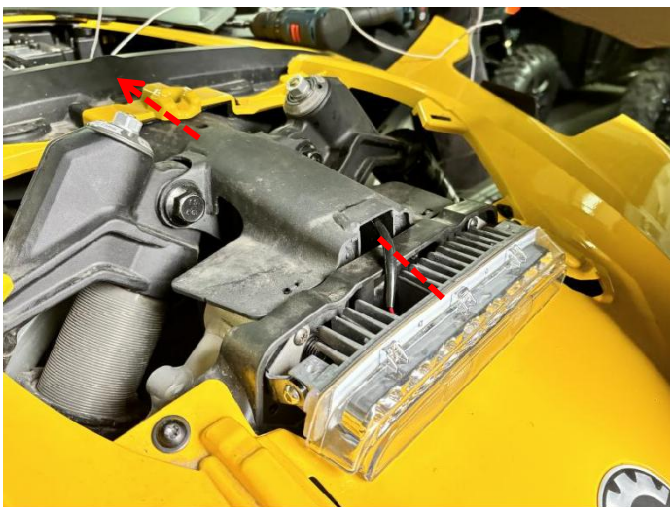

7. Installation completed.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.