

Rear Roof Speakers Pods for Can-Am Commander/ Maverick Trail

ZP-YJ-030603-179

SAUTV5®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.


IMPORTANT

This REAR ROOF SPEAKERS PODS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product image.

(This product does not include speakers)

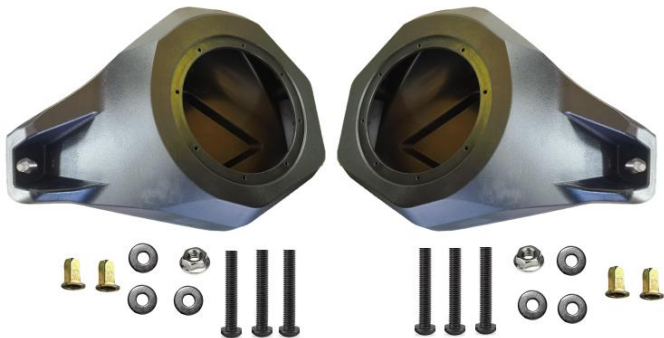

3. The product matching rivet nut, use special tools to rivet in the original vehicle roof frame in the reserved holes.



Rear Roof Speakers Pods for Can-Am Commander/ Maverick Trail

ZP-YJ-030603-179

4. Install the speaker bracket to the original vehicle, and use the supporting screws and nuts to fix.

(The other side of the speaker bracket can be installed in the same way)

NOTE: There is no rivet nut fixing point, need to match the nut for screw locking.



5. Installation completed.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.